



Installation Manual

ShipCEMS Continuous Emission Measurement System



This page is intentionally left blank!



Installation Manual

ShipCEMS Continuous Emission Measurement System

The purpose of this installation manual is to provide the information required to install ShipCEMS in a safe and efficient manner.

This manual is intended for personnel performing the installation. The information supplied shall be used as basis for the installation contractor's own drawings applicable to the ship. On completion of the installation, this manual must be kept on the ship for reference purposes during system maintenance.

Revision status

Revision	Date	Prepared	Checked	Approved
Rev. 01	17.03.2014	EBA	CTO	ISO
Rev. 02	12.05.2014	EBA	PJE	CTO
Rev. 03	14.01.2015	ALI	PJE	MAR
Rev. 04	24.05.2016	ALI	PJE	PWO
Rev. 05	05.07.2017	ALI	PJE	PWO
Rev. 06	01.03.2018	ALI	JET	TESA

Document history

Revision	Reason for issue
Rev. 01	First issue.
Rev. 02	Installation procedures rewritten to include descriptions of heated sample line terminations. Installation of system options included. Other minor text additions and corrections of typing errors.
Rev. 03	Updates in text and illustrations. Installation of probe and adjustment of moisture sensor. Installation Areas (Confined space), ventilation in general.
Rev. 04	Distance probe to scrubber from 1 to 3 m. Improved installation instructions.
Rev. 05	General updates. Info gas cylinder added. Updated installation heated sample line and probe. LOGO TDE (v8)
Rev. 06	Heated sample line installation updated. Demister probe option. Installation on reinforced floor/wall or structural beams.

Vimex AS
P.O. Box 2313, 3103 Tønsberg, Norway
Phone: +47 33 37 51 00
Fax: +47 33 37 51 49
Web: www.vimex.no
E-mail: post@vimex.no

Copyright

© Vimex AS

No part of this document may be reproduced, copied, modified or translated in any form or by any means, without the prior written approval from Vimex AS.

Important

Before using the equipment, read all instructions thoroughly and follow all precautions and warnings contained within this document. Improper use may cause personal injury and/or damage to the equipment, and may void the warranty. Vimex AS disclaims any responsibility for damage or injury caused by improper installation, use or maintenance of the equipment.

Table of contents

1	INTRODUCTION	10
1.1	Purpose	10
1.2	Supply conditions.....	11
1.3	Contact details	11
2	GENERAL SAFETY RULES	12
2.1	High voltage.....	12
2.2	Hazardous components.....	12
2.3	Heavy equipment.....	13
3	SYSTEM DESCRIPTION	14
3.1	System overview	14
3.2	Example of layout.....	15
3.3	Sample and calibration gas flow	16
3.4	Power distribution	17
3.5	Signal distribution.....	18
3.5.1	Without ShipCEMS interface unit.....	18
3.5.2	With ShipCEMS interface unit, SC-IU (option).....	19
4	EQUIPMENT HANDLING	20
4.1	Transportation	20
4.2	Inspection at receipt.....	21
4.3	Lifting.....	21
4.4	Pre-installation storage	22
4.5	Unpacking	23
5	TECHNICAL SPECIFICATIONS	24
5.1	Environmental requirements.....	24
5.2	Type approvals	24
5.3	Physical dimensions.....	24
5.4	Materials	25
5.5	Ingress protection.....	25
5.6	Power supply	26
5.7	Power consumption	26
5.8	Measuring range.....	26

5.9 Calibration gas (span)..... 27

5.10 Instrument air 27

5.11 Tubing..... 27

6 INSTALLATION GUIDELINES 28

7 INSTALLATION PROCEDURES 29

7.1 Heated sample line (wet) 29

7.2 Heated sample probe with quill..... 31

7.2.1 Heated sample line connection on probe..... 38

7.3 Sample Conditioning System 40

7.3.1 Heated sample line connection in SCS..... 43

7.3.2 Calibration gas cylinder 52

7.3.3 Back purge..... 52

7.3.4 Adjust sensitivity of moisture sensor 53

7.4 Analyser cabinet 55

7.4.1 LOGO display 65

7.4.2 Remove plugs 69

7.5 Emergency power switch (option)..... 70

8 INSTALLATION CHECKLIST 71

9 DRAWING REFERENCES 76

10 INSTALLATION OVERVIEW 79

Acronyms and abbreviations

AC	Analyser Cabinet
Back flush	Refer to Back purge
Back purge	Cleaning of probe by flushing instrument air through
CEMS	Continuous Emission Measurement System
CO ₂	Carbon dioxide
DCS	Distributed Control System
EGCS	Exhaust Gas Cleaning System (scrubber)
EMC	Electromagnetic Compatibility
GA	General Arrangement Drawing
N ₂	Nitrogen
PFA	Perfluoroalkoxy alkane (plastic tube material)
PTFE	Polytetrafluoroethylene (plastic tube material)
SCS	Sample Conditioning System
SO ₂	Sulfur dioxide
SP	Sample probe

Admonitions

<i>Note</i>	<i>Text set off in this manner presents clarifying information or specific instructions relevant to the immediate instruction.</i>
<i>Caution</i>	<i>Text set off in this manner provides a warning notice that failure to follow the directions in this caution can result in damage to equipment.</i>
<i>Warning</i>	<i>Text set off in this manner provides a warning notice that failure to follow the directions in this warning can result in bodily harm or loss of life and/or extensive damage to equipment.</i>
DANGER	TEXT SET OFF IN THIS MANNER PROVIDES A WARNING NOTICE THAT FAILURE TO FOLLOW THE DIRECTIONS IN THIS WARNING WILL RESULT IN BODILY HARM OR LOSS OF LIFE AND/OR EXTENSIVE DAMAGE TO EQUIPMENT.


1 Introduction

1.1 Purpose

The purpose of this installation manual is to provide the information required to install ShipCEMS in a safe and efficient manner.

This manual is intended for personnel performing the installation. The information supplied shall be used as basis for the installation contractor's own drawings applicable to the ship. On completion of the installation, this manual must be kept on the ship for reference purposes during system maintenance.

Refer to chapter 10 for installation overviews.

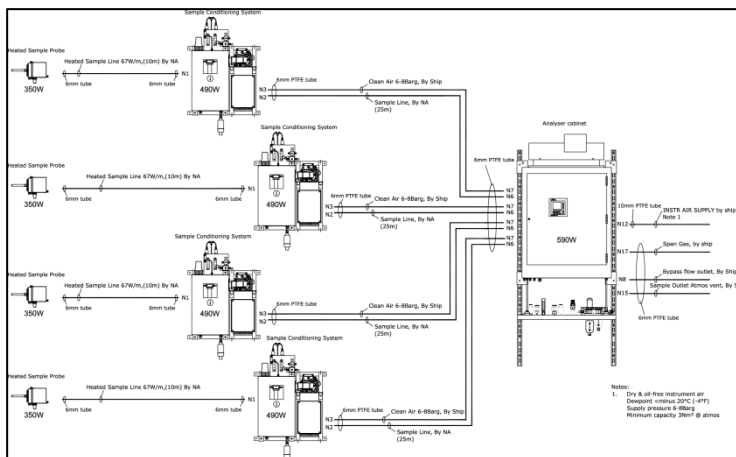

1.2 Supply conditions

The installation contractor performing the installation becomes fully responsible for the ShipCEMS equipment upon receipt unless otherwise stated in the contract. The duration of responsibility includes:

- The period of time the equipment is stored locally before installation.
- During the entire installation process.
- While commissioning the equipment.
- The period of time between commissioning and the final acceptance of the equipment by the ship owner.

Note *Prior to installation, check all units for damage as described in the chapter 4.*

Note *Installation check list needs to be signed and sent to Vimex AS in order to obtain guaranty of the ShipCEMS. Refer to chapter 8.*

1.3 Contact details

For enquiries related to sales, service, support, maintenance and spare parts, please contact us at:

Vimex AS
Visiting address: Wirgenesvei 10
N-3157 Barkåker, Norway
Phone: +47 3337 5100
Fax: +47 3337 5149

Support: support@vimex.no

Service: [service@vimex .no](mailto:service@vimex.no)

Spare parts: spares@vimex.no

Other contacts: post@vimex.no

To assist us in making improvements to the product and to this manual, we welcome comments and constructive criticism at editor@vimex.no.

2 General safety rules

Safety precautions must be followed at all times during installation, operation and maintenance of the system.

Personnel shall be sufficiently qualified, and proper caution shall be taken to avoid injuries or damage to life, health, environment, equipment and property.

2.1 High voltage

Warning *ShipCEMS operates at a potentially lethal AC voltage.*

Always switch off all power before installation or maintenance. Adhere to safety precautions and instructions as directed by company policy.

For safety reasons during troubleshooting on the equipment with power ON, two persons must always be present.

Whenever installation or maintenance is carried out, it is essential that a first aid kit is available, and that personnel are familiar with the first aid instructions for electrical shock.

2.2 Hazardous components

The sample gas may contain trace amounts of hazardous components.

Warning *Many toxic gases are colourless, odourless and non-irritating, and may overcome exposed persons without notice.*

Personnel should have a thorough knowledge and understanding of the physical properties and safety precautions for the relevant gas samples before operating the system.

Gas inlets and outlets are hot in heated analyser systems. Skin contact may result in serious burns even for a long period after the equipment has been switched off.

Make sure the ventilation is good especially if the analyser cabinet is in a small room. Ensure that gas has access to free air.

2.3 Heavy equipment

The cabinets for the Analyser System and the Sample Conditioning System are heavy units.

Caution *During installation or replacement of larger units, appropriate safety clothing and certified lifting equipment must be used.*

Do not open cabinet doors while in rough seas. Doors may suddenly swing open and cause damage or injury.

3 System description

3.1 System overview

The main purpose of the ShipCEMS Continuous Emission Monitoring System is to analyse sulphur dioxide and carbon dioxide in wet marine exhaust gas.

The standard ShipCEMS consists of the following main units:

- Analyser cabinet
- Sample Conditioning System(s)
- Heated sample probe(s)
- Heated sample line (wet)
- Sample line (dry)

Optional gas cylinders are provided by the ship owner or by Vimex AS as specified by contract.

Additional external tubing and electrical interface cables are partially provided by Vimex AS and partially by the installation contractor, as specified in the next chapters.

Note *Equipment provided locally by the installation contractor or by local dealers is not described in this manual.*

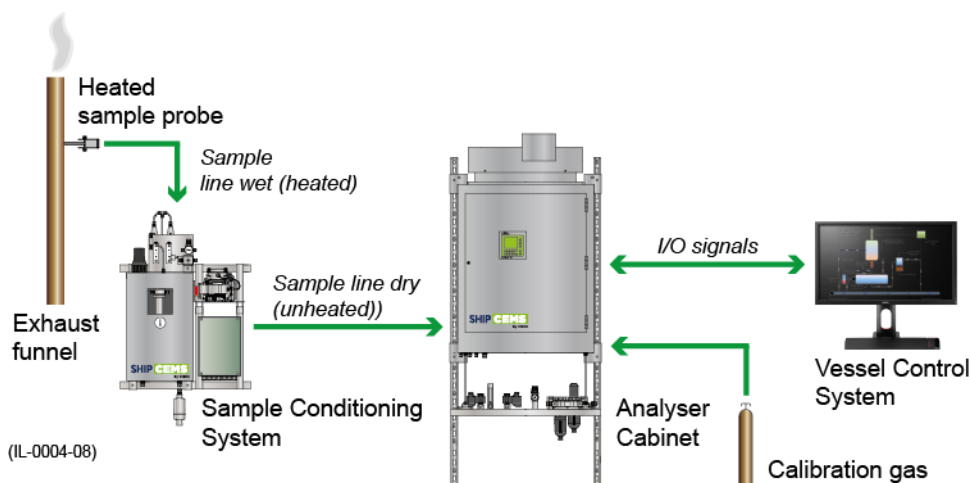


Figure 1 *Block diagram for ShipCEMS analyser system*

3.2 Example of layout

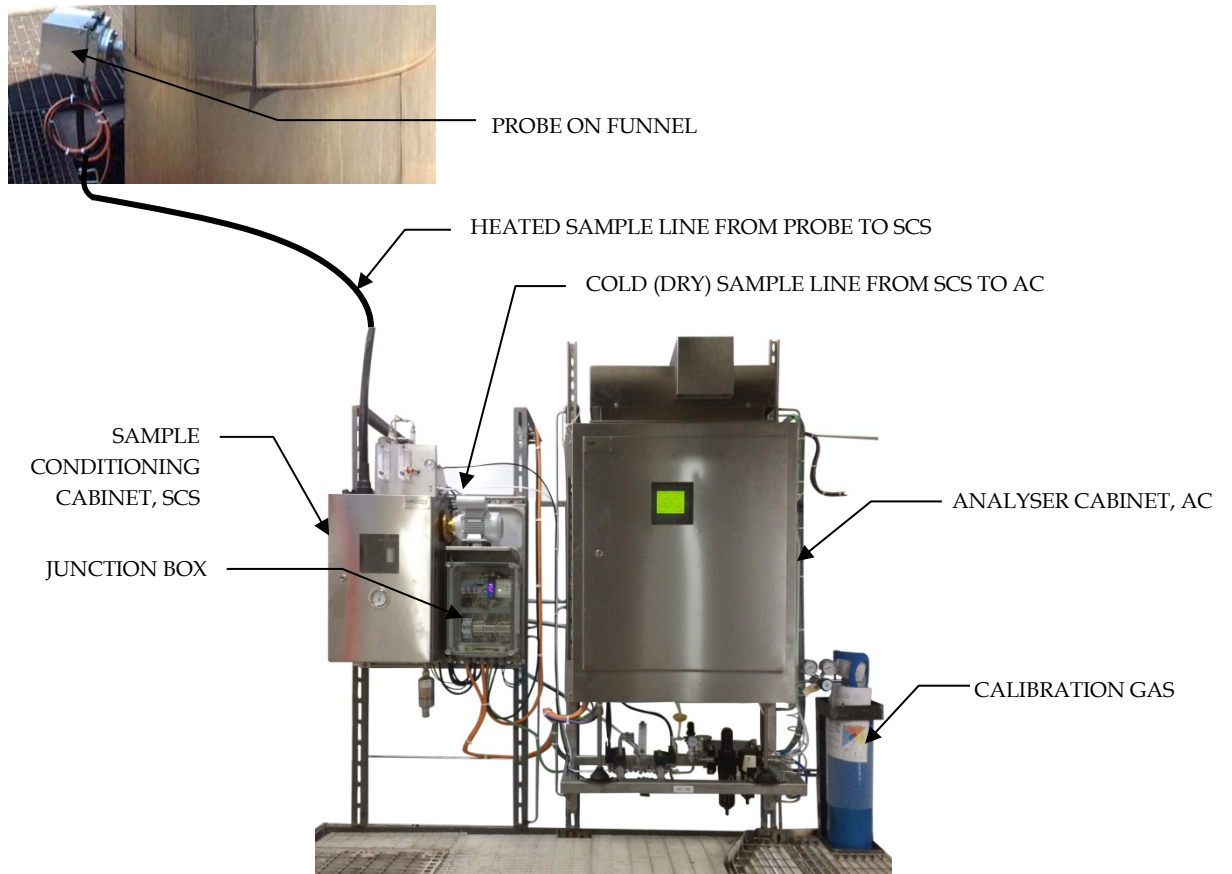


Figure 2 ShipCEMS main parts

3.3 Sample and calibration gas flow

Instrument air supply is provided by the ship. The tube is provided and installed by the installation contractor (refer to A in Figure 2 and to utility requirements ShipCEMS). All other tubes are provided by the manufacturer, but is installed by the installation contractor (refer to B-F2 in Figure 2).

The tube for wet samples is a heat traced sample line. The tube for cold samples must be heated if the ambient temperature may drop below +10°C (+50°F) (outdoor installations only).

The instrument air supply tube between ShipCEMS cabinets must be heated if the ambient temperature may drop below 0°C (+32°F) (outdoor installations only). Instrument air must be clean according to specification in chapter 5.10.

Warning *F1 and F2: Outlet gas and calibration gas from Analyser cabinets (AC) needs to be vented to free air. If AC is installed in a small room, the outlet gas level will increase unless it is vented. For personal safety, ensure the outlet gas has access to free air.*

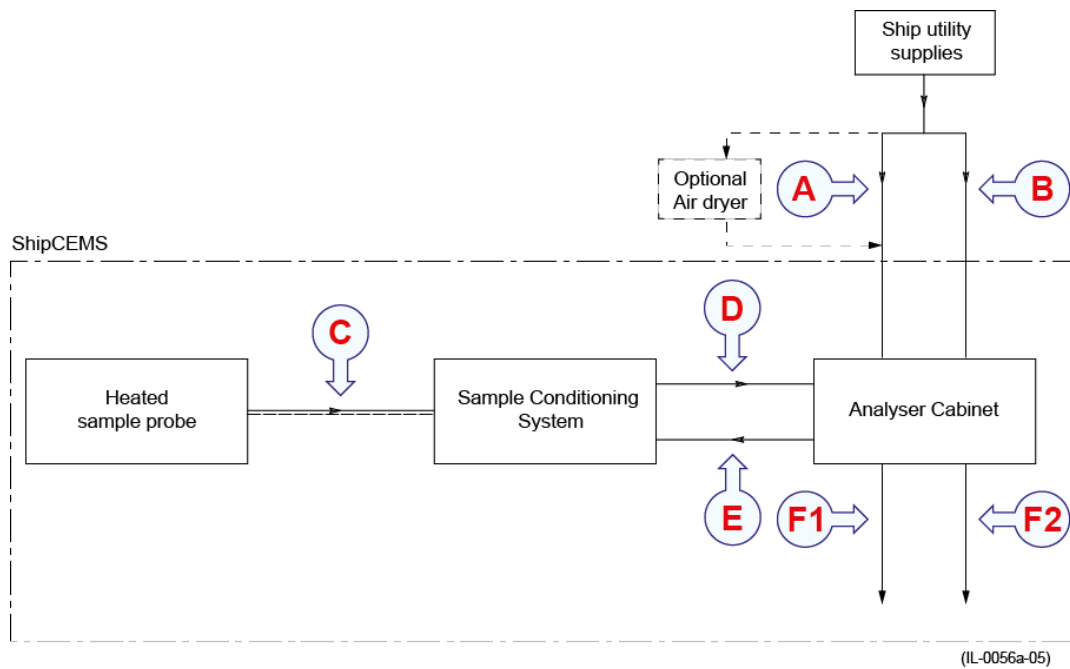


Figure 3 *Block diagram – sample and calibration gas flow*
 A: Instrument air supply, 10 mm o. d. tube, SS316 compression tube fitting
 B: Calibration gas, 6 mm o. d. tube, SS316 compression tube fitting
 C: Heated sample line (wet), 33 mm o. d. PFA/PTFE tube
 D: Sample line (dry), 6 mm o. d. PFA/PTFE tube
 E: Instrument air supply tube, 6 mm o. d. PFA/PTFE tubing
 F1: Analyser Atm. vent
 F2: Atm. vent from stream solenoids

3.4 Power distribution

ShipCEMS requires 230/110V, 50/60 Hz to operate. The power supply must be continuous. It is recommended using an Uninterruptible Power Supply (UPS). The minimum requirement for the power feed cables is for 230V: 2 x 2.5 mm² + PE (protective earth) and for 110V: 2 x 4mm² + PE (protective earth).

All system units must be connected to a local On/Off two-pole power switch located within a radius of 1.5 metres. All switches must be provided by the installation contractor.

Warning *Use the appropriate circuit breaker in the ship's switchboard, and label the breaker with a warning sign informing that installation work is being carried out before connecting external power.*

The circuit breaker label can only be removed after all power and signal interfaces have been connected.

The heated sample line for the exhaust gas sample is powered from the Sample Conditioning System.

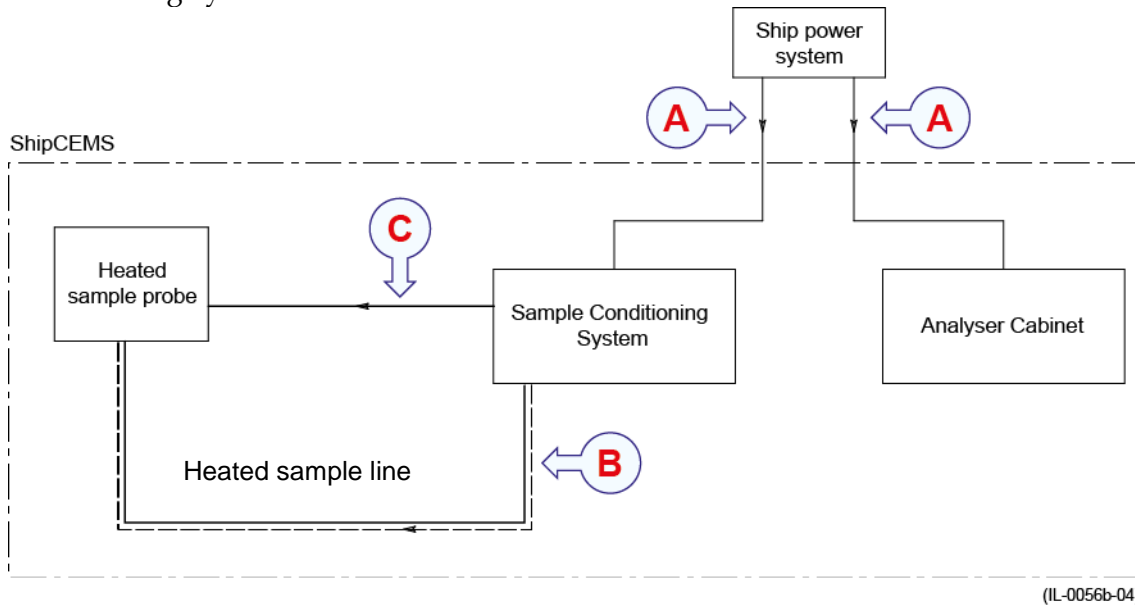


Figure 4 *Block diagram – power distribution*
 A: Power supply, 2-phase
 B: Heated sample line from Sample Conditioning Cabinet
 C: Power feed from Sample Conditioning System

3.5 Signal distribution

Refer to the following block diagrams for overview:

- [P300-6001] System Block Diagram Pipe and Gas Distribution Overview
- [P300-6101] Electrical Block Diagram Signal and Power Distribution Overview
Interface unit - Optional

3.5.1 Without ShipCEMS interface unit

Digital and analogue signals to and from the DCS or EGCS must be interconnected using multicore/multipair instrument cables (refer to A and B in Figure 4).

Alarm signals between ShipCEMS units must be interconnected using two pair instrument cables (ref. C in Figure 4).

The back purge control is without ShipCEMS interface unit (SC-IU).

All cables shall be provided and installed by the installation contractor.

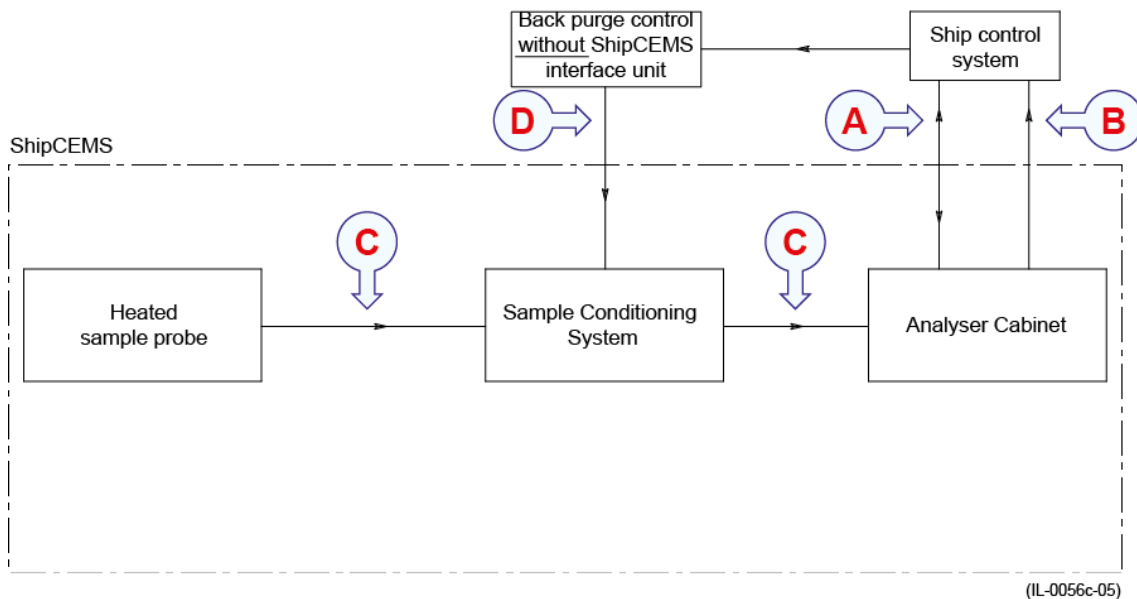


Figure 5 Block diagram – signal distribution
 A: Digital signals
 B: Analogue signals
 C: Alarm signals (digital)
 D: Back purge control signal (+24VDC), supplied by customer

3.5.2 With ShipCEMS interface unit, SC-IU (option)

Communication to client is through fieldbus communication, usually Profibus and Modbus. Refer to A in Figure 5.

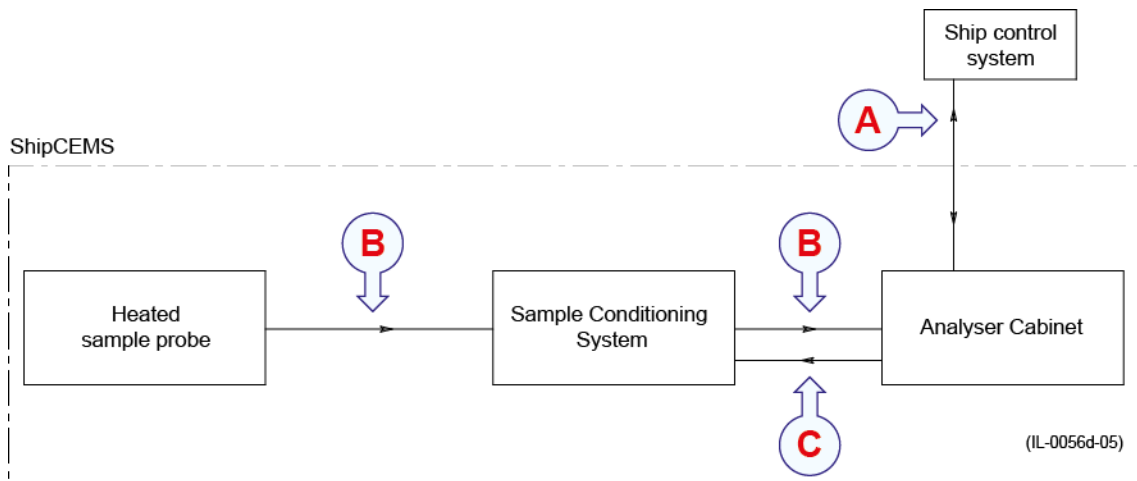
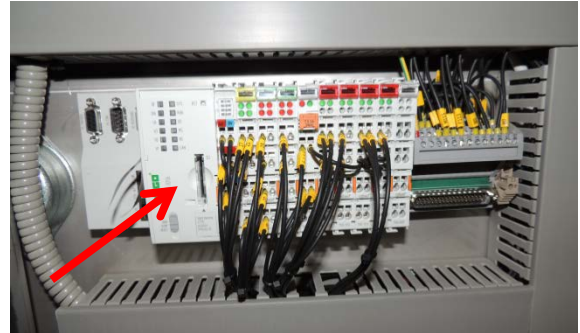


Figure 6 Block diagram – signal distribution
 A: Field bus communication
 B: Alarm signals (digital)
 C: Back purge control signal (+24VDC)

4 Equipment handling

This chapter describes the equipment handling procedures needed for the installation contractor to evaluate the equipment dispatch and to make plans for receipt, storage and installation of the equipment.

Note *Failure to adhere to instructions given may render the guarantee void.*

Caution *During all stages of equipment handling, including installation, use adequate protective covers to shelter the equipment from falling objects from overhead work or similar.*

4.1 Transportation

Unless otherwise stated in the accompanying documentation, equipment supplied by Vimex AS can be transported using all methods approved for fragile equipment. The units must be transported in accordance with general or specific instructions for the appropriate units, using pallets, transport cases or carton boxes as appropriate.

- 1) Keep the equipment dry at all times and ensure it is sheltered from weather. All equipment shall therefore be transported below deck for sea transport, and preferably under a canopy for road transport.
- 2) When equipment is marked with text and symbols indicating which way it is to be placed, follow the instructions given.
- 3) Ensure that ambient conditions, such as temperature and humidity, are within the equipment's specifications at all times.
- 4) Securely restrain the equipment to avoid mechanical damage and injury to the equipment and to personnel.
- 5) Ensure that the equipment will not be subject to shock, excessive vibrations or other rough handling.
- 6) Handle equipment containing fragile electronic components, such as analyser model, with special care.

4.2 Inspection at receipt

A visual inspection must be carried out immediately after the equipment has arrived at its destination to check for any transport or unloading damages.

- 1) Check all pallets, wooden boxes, plastic bags and other packing media for physical damage. Look for signs of dropping, immersion in water or other mishandling.
- 2) If damage is detected externally, open the packaging to check the contents. Request a representative of the carrier to be present while opening, so any transportation damage to single units can be identified.
- 3) If any unit is damaged, prepare an inspection report stating the condition of the unit and actions taken. The report shall be sent promptly to Vimex AS.
- 4) Check the humidity absorbing material. If required, dry or replace the bags, then repack the units.

4.3 Lifting

Heavy equipment will normally be marked with its weight. To ensure selecting the correct lifting apparatus, always check the weight of the equipment before attempting to lift it.

Caution *Please handle all equipment with care to avoid damage due to sudden shock or impact.*

- 1) Cabinets and similar equipment are mounted onto pallets and can be lifted by a fork lift or a pallet truck.
- 2) The AC cabinet is equipped with lifting lugs (Ø15 mm in 4 mm SS316 plate) and can be lifted by a crane or a winch.
- 3) Instrument boxes, sample probes and other smaller units can be removed from pallets by hand.

4.4 Pre-installation storage

The equipment should be stored in its original transport case until ready for installation. Transport cases must not be used for any purpose for which they were not intended.

It is recommended that the equipment is stored indoors until placed in its intended operating position.

If stored outdoors and exposed to ambient conditions, additional heaters provided by the installation contractor must be used inside cabinets to avoid any vapour to condense in electronic and electrical equipment prior to commissioning and start-up.

- 1) Keep the equipment in a dry, non-condensing atmosphere, free from corrosive agents and isolated from sources of vibration.
- 2) Ensure that the temperature at the storage location is at least +15°C (+59°F) with a relative humidity of 0 to 95 % (non-condensing).
- 3) Carefully unload cabinets onto their foundation or at levelled foundations at the site's storage facilities.
- 4) If stored in a humid environment, ensure that cabinets are heated to avoid failure of built-in sensitive instrumentation, such as analysers. Note that sample probes and similar equipment may be stored in an unheated environment.
- 5) Close all doors and other openings to prevent ingress of dust, dirt and moisture.
- 6) Lock the cabinets at all times to prevent unauthorised personnel accessing the equipment.

4.5 Unpacking

Normal precautions must be undertaken during unpacking to prevent damage to equipment or to personnel.

It is recommended to store equipment (unless equipment is prepared for immediate use) in its original packing material.

Equipment must be installed in its intended operating position as soon as possible after unpacking.

- 1) Place the transport case to be unpacked on the floor or on a stable work bench.
- 2) When equipment is marked with text and symbols indicating which way it is to be placed, follow the instructions given.

<i>Caution</i>	<i>When handling heavy units, use suitable certified lifting apparatus.</i>
----------------	---

<i>Caution</i>	<i>Be careful when working with pallets and wooden boxes. The metal edges of such units may have sharp edges.</i>
----------------	---

- 3) Check the transport case for signs of dropping, immersion in water or other mishandling.
- 4) Open the transport case using appropriate tools. Care must be used when opening the case to ensure the contents are not damaged.

<i>Caution</i>	<i>If a wooden box has been closed using screws, always remove them using a screw-driver. Do not attempt to force the lid off with a crow-bar or similar.</i>
----------------	---

<i>Caution</i>	<i>Do not use a knife to open cardboard cartons, as the contents may lie close to the surface, and may therefore be damaged by the blade.</i>
----------------	---

- 5) Once the transport case is open, carefully remove all loose packing and insulation material before lifting out and installing the equipment contained.

<i>Caution</i>	<i>Tubing and cable must never be used as carrying handles or lifting points.</i>
----------------	---

- 6) Also check the transport case for additional equipment that may have been added to the carton during packing such as manuals, special tools, door keys etc.

5 Technical specifications

5.1 Environmental requirements

ShipCEMS is designed to comply with:

- IACS E10 - Test Specification for Type Approval
- IEC 60945 - Maritime navigation and radio communication equipment and systems - General requirements - Methods of testing and required test results
- IEC 60529 - Degrees of Protection Provided by Enclosures (IP Code)

5.2 Type approvals

ShipCEMS is designed in accordance with the requirements of:

- DNV GL (Certificate no. A-13672)
- Lloyd's Register (Certificate no. 13/70009)
- ABS (Certificate no. 15-HS1356772)
- Bureau Veritas (Certificate no. 42658/A0 BV)
- Rina Services (Certificate no. MAC 085816XG)

5.3 Physical dimensions

Item	Specification
Analyser cabinet	
Dimensions (W x D x H)	800 x 400 x 1000 mm (31 1/2" x 15 3/4" x 39 1/2")
Weight	143 kg (315 lbs.)
Sample Conditioning System	
Dimensions (W x D x H)	400 x 300 x 700 mm (15 3/4" x 12" x 27 1/2")
Weight	52 kg (115 lbs.)

Item	Specification
Heated sample probe	
Probe length	254 mm (10")
Quill length	1 m (40")
Flange diameter	160 mm (DN65 PN6) (or customer specific)
Weight	10 kg (22 lbs.)
Sample probe counter flange	
Dimensions	DN65, PN 6 (or customer specific)
Heated sample line (wet)	
Diameter	50 mm (2")
Weight	1.2 kg/m (0.4 lbs./ft.)

5.4 Materials

Item	Specification
Cabinets	SS316L
Tubing	PFA/PTFE
Fittings	SS316L
Heated sample probe quill	SS316L
Heated sample probe counter flange	SS316L (or customer specific)

5.5 Ingress protection

- IP44

5.6 Power supply

Item	Specification
Power from ship switchboard	230V, 2-phase, 50/60 Hz Option: 110V, 2-phase, 50/60 Hz
Power cable specifications	230V: 2 x 2.5 mm ² + PE 110V: 2 x 4 mm ² + PE

5.7 Power consumption

Item	Specification
Analyser cabinet	590 W
Sample Conditioning System	490 W
Heated sample probe	350 W
Heated sample line (wet)	67 W/m
Sample line (dry)	15 W/m if ambient temperature < +10°C (+50°F) Non heated if ambient temperature > +10°C (+50°F)

5.8 Measuring range

Item	Specification
SO ₂	Default 0-50 ppm, Max 0-1000 ppm
CO ₂	Default 0-10 %, Max 0-15 %

5.9 Calibration gas (span)

Item	Specification
Gas composition	40 ppm SO ₂
<i>Standard specifications. Other gas compositions may be ordered on request.</i>	8 mol% CO ₂ Rest Nitrogen N ₂
Cylinder size	10 litre (typical)
Cylinder pressure	> 100 barg (> 1500 psig)
Consumption	5 litre / calibration

5.10 Instrument air

Item	Specification
Quality	Dry, oil-free according to ISO 8573-1:2010 class 1.2.1 Dewpoint: $\leq -40^{\circ}\text{C}$ Particles per m ³ (1-5 μm): ≤ 10 Total oil: $\leq 0.01 \text{ mg/m}^3$
Consumption for each connected SCS (1 to max 4)	Minimum 15 NI/min (0.9 Nm ³ /hour) @ atmospheric pressure
Pressure range	6 to 8 barg (90 to 120 psig)

5.11 Tubing

ShipCEMS provides tubing (PFA/PTFE) with the rest of the delivery.

Caution *Do not use any other tubing. It can lead to incorrect analysis.*

6 Installation guidelines

ShipCEMS is subject for approvals by classification societies. The approval design and verification is obtained according to the latest IACS E10 revision.

Best practice proven over many years of experience by the installation contractor can be used to implement other installation solutions than what Vimex AS recommends. As the installation contractor has the final EMC responsibility, the installation contractor must ensure that the installation complies with classification rules.

The classification society may also enforce additional requirements influencing the installation. The installation contractor must ensure that the ShipCEMS installation complies with any additional requirement defined by the classification society.

ShipCEMS must be installed by skilled personnel and be supervised by a technician with relevant experience. Recommendations and requirements for installation of main system items are listed in the following.

Note *Failure to adhere to instructions given may render the guarantee void.*

All work shall be carried out in accordance with approved drawings. Therefore, prior to installation, the drawing file prepared by Vimex AS shall be consulted.

Note *Detailed plant specific mechanical drawings for the installation must be provided by the installation contractor, or any contractor performing the installation. Vimex may, on special order, provide assistance to these drawings.*

Note *All physical dimensions in this manual are given in millimetres (metric).*

Caution *Instruments, cables and other electrical equipment must be protected against mechanical damage during installation.*

Observe that the ShipCEMS framework structure is of stainless steel material SS316L. Plan your installation procedures accordingly. Install cabinets (especially analyser cabinet) on reinforced floor/wall or structural beams.

Caution *As instruments are sensitive devices, do not weld onto the ShipCEMS framework.*

If planning to install any ShipCEMS units outdoors, weatherproof protection must be provided. Also avoid installing in open areas with heavy winds, sea splash zones and other areas not suitable for service and maintenance activities.

7 Installation procedures

7.1 Heated sample line (wet)

The heated sample line is supplied on a reel or similar. We recommend that the heated sample line is installed downward towards the SCS, unless other options are better suited for the installation. Refer to Figure 8.

Avoid areas where the ambient temperature may exceed +45°C (+113°F).

The heated sample line is an isolated tube bundle consisting of two sample lines (one is spare) and a tracer cable (heating element). Refer to figure below.

The figure below with the electric end termination is connected to the probe. The other end of the heated sample line is connected inside the SCS. Refer to *Figure 8*



Figure 7 Heated sample line to be connected to probe

Caution *All electrical connections and installations must comply with the requirements of all applicable national and local codes. If there is a conflict between these instructions and the requirements of applicable codes the requirements of the codes must be followed.*

- 1) Roll out the heated sample line on a flat surface.
- 2) Route the heated sample line along existing structures such as cable trays and beams to provide sufficient support.

Caution *Observe the minimum bending radius of 300 mm when installing the heated sample line to avoid breakage of the internal tubing and heat tracer cable.*

- 3) Make sure that there will not be any water traps in the heated sample line.

Caution *Water trap will interfere with the sample and cause flow alarms! Refer to Figure 8.*

- 4) At both ends, cut the tube to fit the actual distance between the sample probe and the Sample Conditioning System.

Note *Allow at least a spare length of one meter at each end for end terminations.*

- 5) Permanently secure the heated sample line using metal clamps. Make sure to use a sufficient number of support points along the route, typically every two metres to avoid water traps.
- 6) Temporarily seal both ends of the cable using a plastic bag.

7.2 Heated sample probe with quill

Drawing references:

- [1202] – Heated Sample Probe, Flange DN65 – PN6
- [3801] – Sample Conditioning System
- [5301] – Heated Sample Probe, Model 222.15 / 222.17, Plug Connections

The heated sample probe with quill is typically mounted onto the funnel using a flange. The heated sample probe should be mounted minimum 3 metres (3000 mm) above the EGCS. Refer to Figure 10. Typical size of the flange is DIN standard DN 65, PN 6, but other sizes may be delivered if required (including ASTM). For ordinary marine exhaust systems, the flange material used is stainless steel SS316L. Other materials can be supplied if required. The opening in the funnel must be minimum 60 mm in order to replace new demister filling. Refer to Figure 10.

The heated sample probe is supplied as a complete unit, excluding the counter flange (available as option). The counter flange to be welded onto the duct shall be provided by the installation contractor.

The heated sample probe should be mounted in a section of straight duct, with a length of five duct diameters before and three diameters after an obstruction or bend. If compromises are necessary, Vimex AS should be consulted for advice.

The quill (the tube entering the funnel) varies depending on scrubber design.

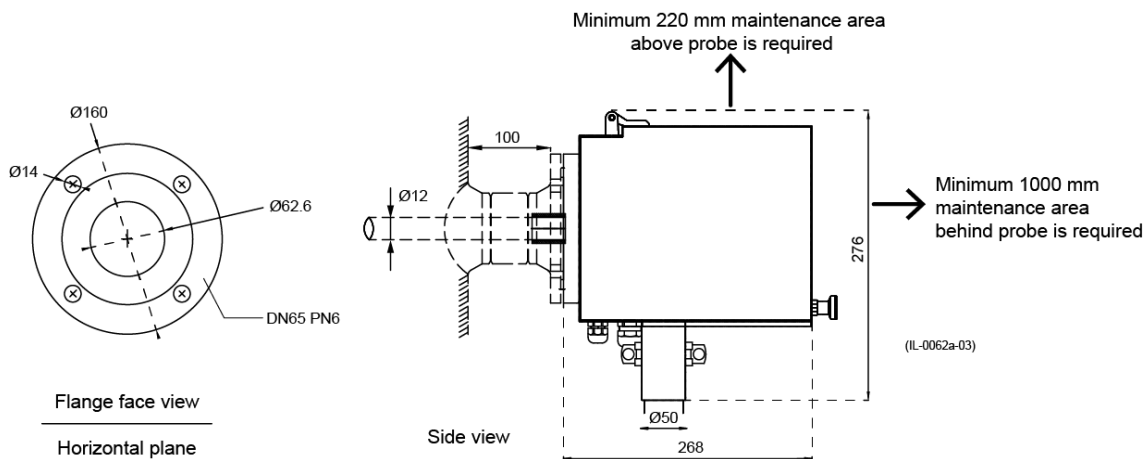


Figure 8 Outline dimensions heated sample probe and flange

Note The probe can be installed as per Figure 7 with sample line outlet under the probe. It can also be installed to either side or upwards. Make sure there is no water trap when connecting the heated sample line to the probe. Refer to Figure 8.


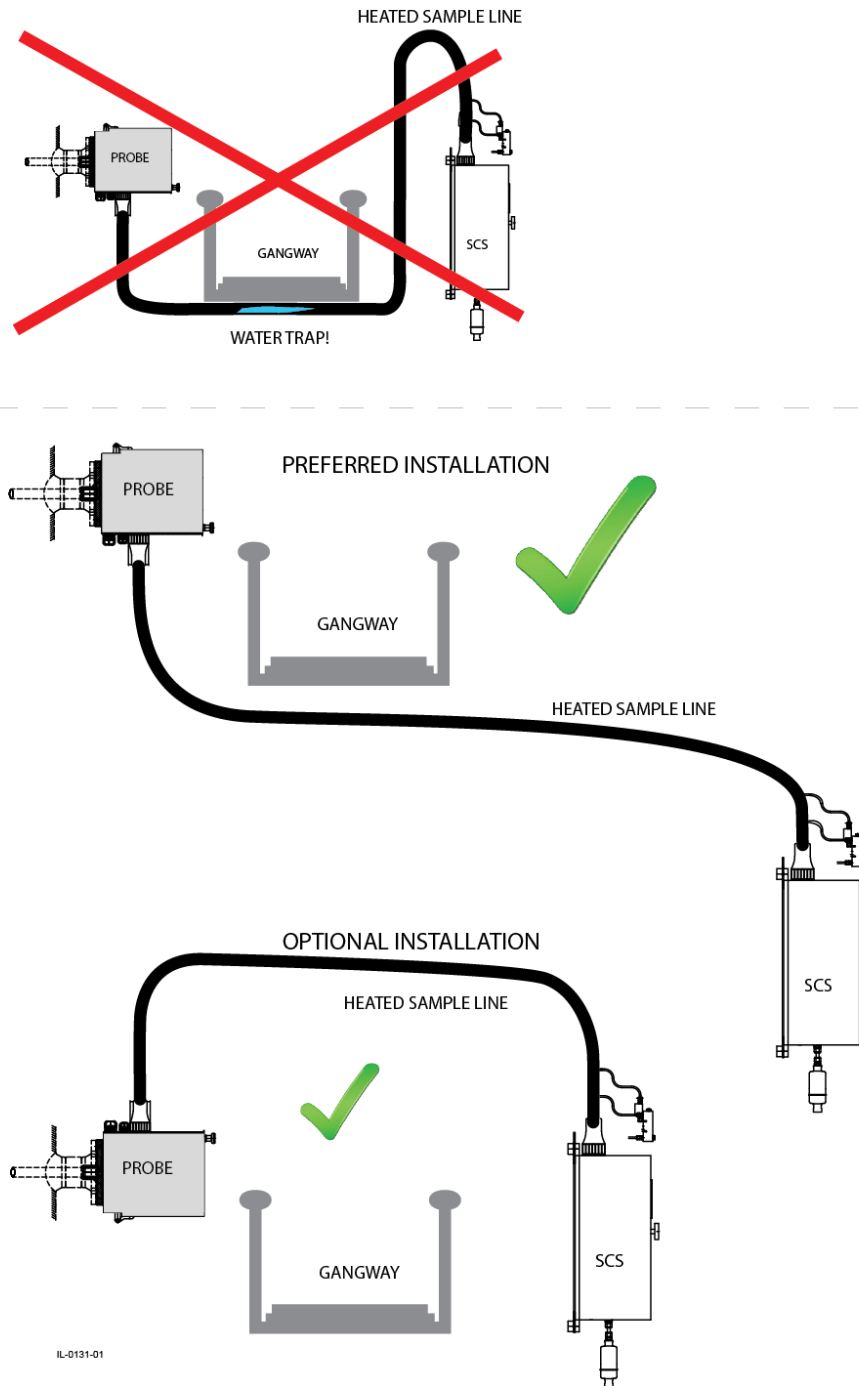


Figure 9 Correctly installed heated sample line with no water trap

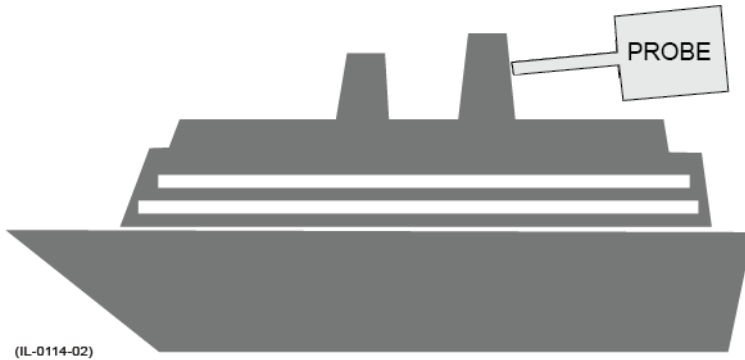

(IL-0114-02)

Figure 10 Probe (blow-up) location on vessel

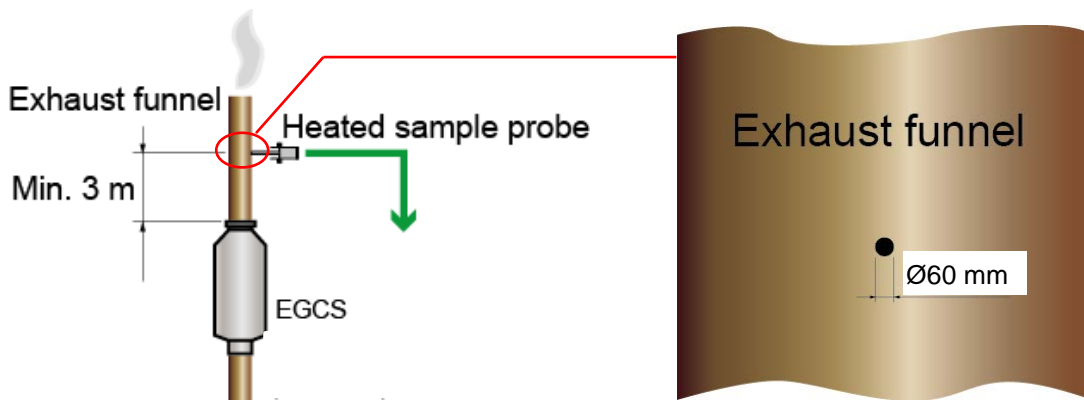


Figure 11 Distance between heated sample probe and EGCS as well as opening in the exhaust funnel

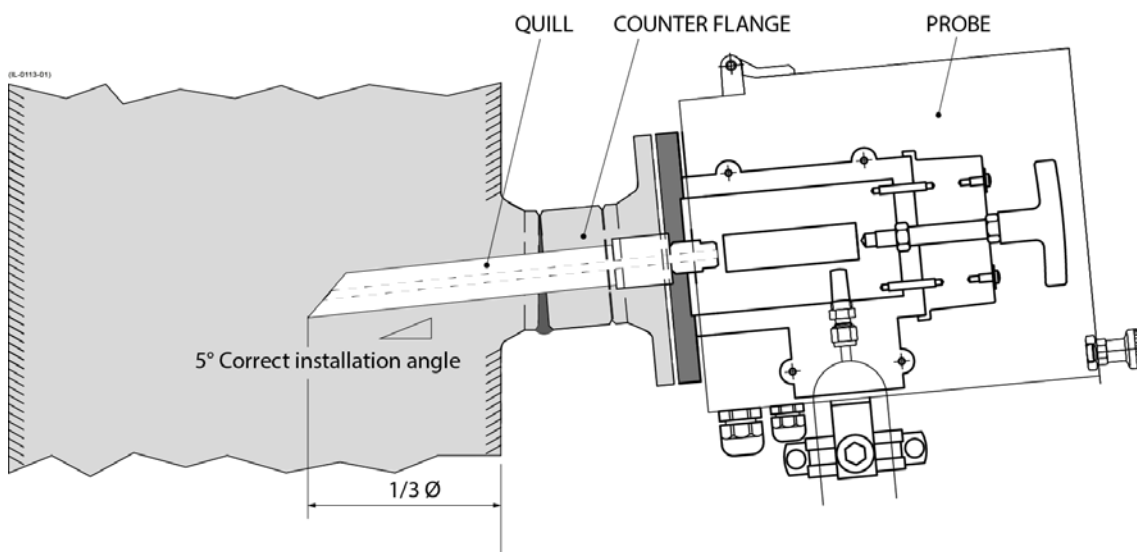


Figure 12 Probe with 5° installation angle (standard quill mounted)

Caution *For outdoor installation: Cover the probe with weather protection if the probe is installed with sample line outlet above or to the sides of the probe.*

- 1) Find a suitable location for the counter flange.
 - a) Make sure the location for the installation is according to Figure 9 (recommended location is in longitudinal ship direction.) Inside installation is preferred; for outside installation the probe has to be insulated sufficiently.
 - b) Note that the heated sample probe should be located minimum 3 m above the EGCS (preferred location 3m above EGCS). The opening into the exhaust funnel must be Ø 60 mm. Refer to Figure 10.
 - c) Make sure the inclination of the probe (and the quill) will be approx. 5°. Refer to Figure 11.

Note *The required minimum maintenance area behind the probe is 1000 mm. Ensure that this space is sufficient both for probe installation and for probe filter replacement. Refer to Figure 7.*

- 2) Weld the counter flange onto the funnel.
- 3) Weld a stand-off pipe with flange from the outer wall of the duct to the face of the welded mating flange.


Note *The recommended stand-off pipe/ spool piece is 100 mm, but this will depend on the insulation thickness used on the exhaust funnel. Refer to Figure 7.*

This will allow space for bolts and funnel insulation. The stand-off pipe and mating flange material can be similar to the funnel structure or as selected by the installation contractor.

If the funnel is uninsulated, a heat shield in form of a steel plate or similar must be installed to protect sample probe components from radiant heat.

- 4) Remove (red) cap from quill and use the threaded connection to mount the quill on the probe. Tighten the connection.
- 5) The sample probe consists of a quill – the sampling tube - that is inserted into the funnel. To obtain a representative sample, the portion of the quill penetrating the funnel should be 1/3 or 2/3 of the inner diameter of the funnel.

Only applicable for demister quills (option):

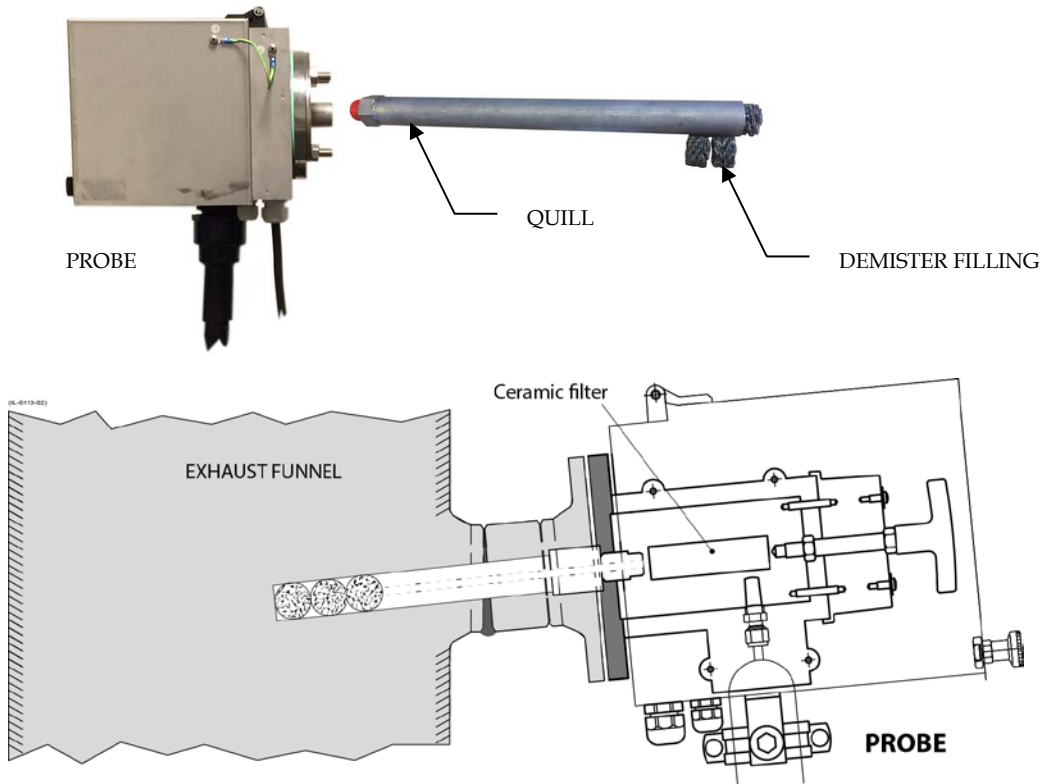

Check that the demister filling (three steel wool cushions) is inside the quill. The filling should be in the tip of the quill with no distance between.

- 6) Insert the quill into the exhaust funnel. Refer to Figure 11.
- 7) Mount the sample probe onto the counter flange. Check that inclination angle is approx. 5°. Refer to Figure 11.

Note *When the quill is installed sloping slightly into the funnel, condensed water will go to the funnel and not into the heated sample probe.*

- 8) Check the ceramic filter for contamination or physical damage. Replace if required. Refer to User manual. Liquids can then drain back into the funnel and not into the heated filter assembly. Any liquid drainage into the heated filter will clog the filter, hence reducing the filter performance and sample flow to SCS.
- 9) Strip the heated sample line at an appropriate length ensuring that the sample tube can be connected to the sample outlet of the probe.

Caution *Take care not to damage the internal tracer cable, sample tube and spare tube.*

The tracer cable shall have a length that allows the sample to be heated throughout.

10) End termination of tracer cable:

The entry seal (heat-shrinkable nose) is installed to prevent moisture from entering.

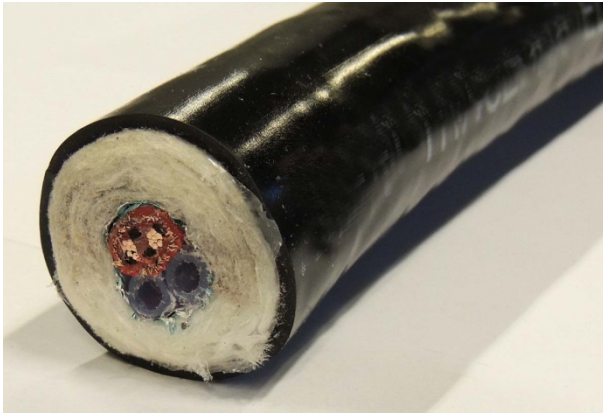
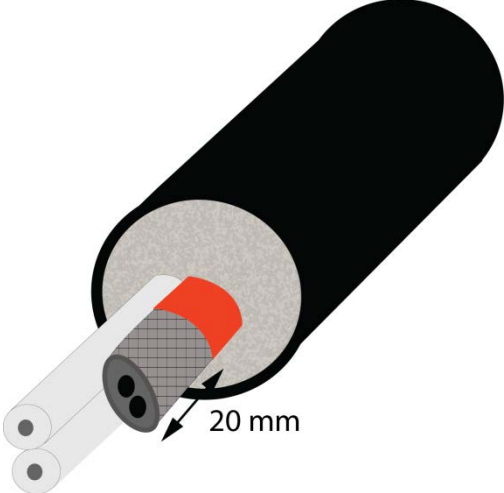





Figure 13 Heated sample line as delivered

T9G90-UC Kit Contents (kit is inside SCS, refer to Figure 19)	
1 pcs Silicone Tracer End Cap	
1 pcs Tube of RTV Silicone	
1 pcs Silicone Two-Leg Connection Sleeve - not used	
1 pcs Ring Terminal - not used	
1 pcs Entry Seal - not used	
1 pcs 36" (915mm) Heat Shrink Tubing - not used	

<p>a)</p> <ul style="list-style-type: none"> • Cut off 60 mm of the heated sample line insulation to expose sample lines and tracer cable. • Cut the tracer cable to 30 mm above the insulation • Cut sample line to be used to 50 mm above insulation. Mount the nut set. Refer to Figure 14. Let spare sample line be 60 mm (in case of tube shrinking during temperature changes). Seal the spare tube. • Make sure there is no contact between electric leaders and shield. 	
---	--

<p>b)</p>	<p>Cut off 20 mm of the orange insulation to make the screen (metallic threads) visible.</p>	
<p>c)</p>	<p>Remove 20 mm of the screen (metallic threads).</p>	
<p>d)</p>	<p>Fill silicone end cap with RTV silicone and slide over end of cable. Hold while it sets.</p>	
<p>e)</p>	<p>Cover the entire insulation surface with RTV silicone to prevent water and condensation from entering.</p>	

7.2.1 Heated sample line connection on probe

The mounting bracket and heat-shrinkable nose are already attached to the probe at delivery.



Figure 14 Heat-shrinkable nose

- 1) Remove the plastic cover for connection of the sample line.
- 2) Insert the heated sample line into the heat shrinkable nose and connect the sample tube to the sample outlet of the probe using the fitting supplied. Hand-tighten first and then use an open 14 mm wrench to hold the counter nut and another 14 mm wrench to tighten one revolution. Refer to Figure 14 and figure to the right.




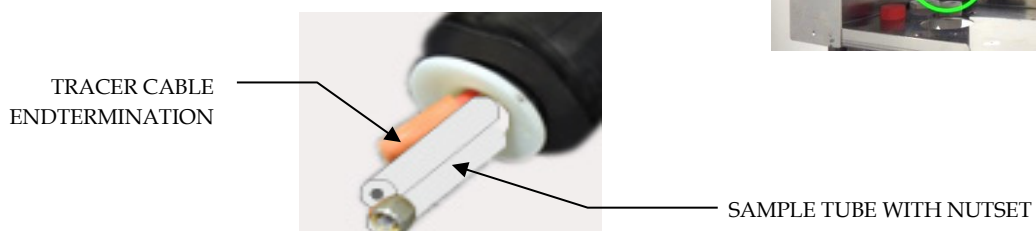


Figure 15 Entry seal assembly including mounting bracket

- 3) Shrink the expanded nose by applying heat with a heat gun. Move the heat gun back and forth to apply heat evenly. Stop heating when the nose has assumed the shape of the heated sample line.

Caution Hold the heated sample line approx. 5 minutes while the heat-shrinkable nose sets. Apply compressed air to speed up the process.

- 4) Fasten the plastic covers, one on each side of the sample probe.

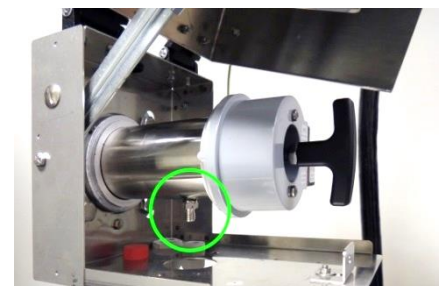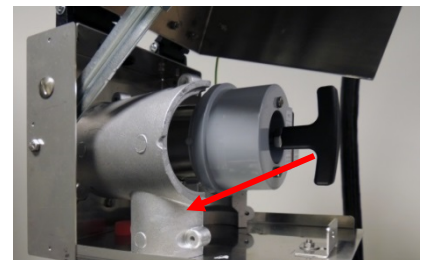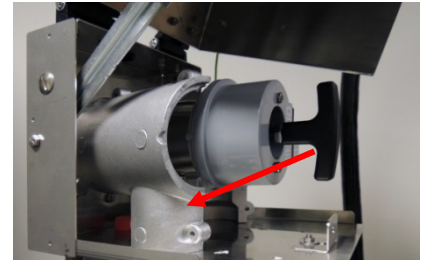

- 5) Cable entrances to the sample probe are through an M25 and an M20 cable gland at the bottom of the protection shield for the power and signal cables respectively. Connect the power supply cable to the sample probe. The power feed is taken from the adjacent Sample Conditioning System.
- 6) Connect the Low Temperature Alarm signal cable at the sample probe end. Both interface connections are standard 3-pole DIN plugs.

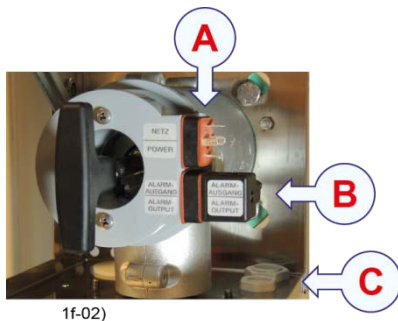


Figure 16 Heated sample probe, electrical interfaces
 A: Power plug
 B: Alarm signal plug
 C: Cable glands

7.3 Sample Conditioning System

Drawing references:

- [1801] – Sample Conditioning System, External View, Hook-up Details
- [1802] – Sample Conditioning Cabinet, Interior
- [1804] – Sample Conditioning Cabinet, Hook-up/Wall Mounting, External View
- [1805] – Sample Conditioning System, Junction Box Layout
- [3801] – Sample Conditioning System
- [5101] – Sample Conditioning System, Heater & Flow Control Logic, Junction Box
- [5102] – Termination Diagram, Sample Conditioning System, Backflush Option, Junction Box

The Sample Conditioning System is supplied as a complete unit, including a Unistrut profile mounting frame (41 x 21 mm).

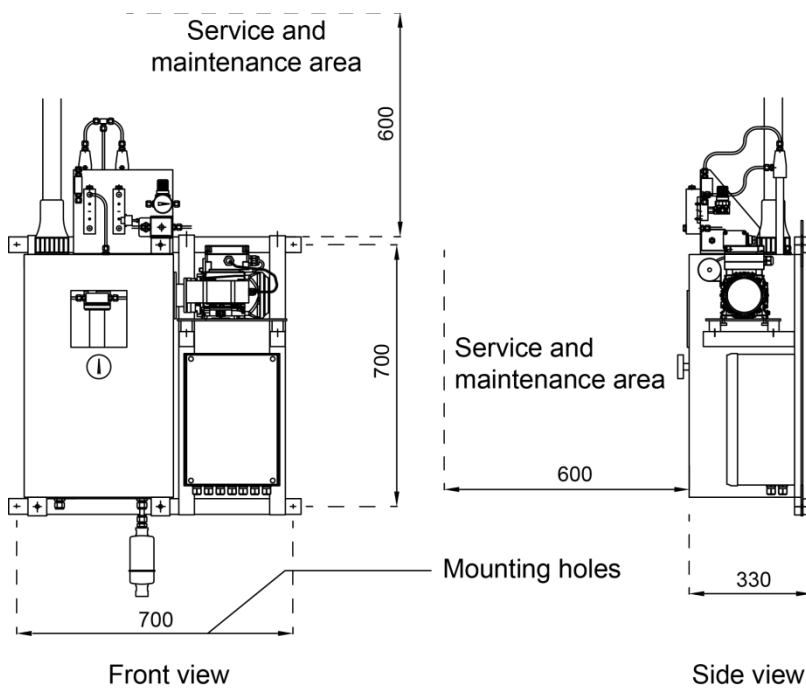


Figure 17 Sample Conditioning System, outline dimensions

- 1) Find a suitable and stable location for the cabinet. Avoid vibrations.

The cabinet must be mounted as close as possible to the sample probe, keeping the length of the heated sample line to a minimum. The distance can typically be 2 to 3 metres, but should not exceed 30 metres. Contact Vimex if the distance exceeds 20 meters.


To ensure maintenance access, make sure that the cabinet is installed with adequate spacing in all directions.

- 2) Prepare the installation framework by welding steel support for the cabinet on the ship's casing.
- 3) Lift the cabinet mounting frame onto the prepared framework using the center mounted lifting lug.
- 4) Fasten the cabinet to its mounting frame with bolts and washers.

It is recommended to use minimum four M14 bolts with nuts, one at each end of the horizontal support frame bars. The arrangement should be fixed using flat washers and external tooth locks.

The cabinet requires instrument air supply to operate. The air supply should be supplied via the Analyser cabinet. Refer to 5.10 for technical specification on instrument air.

- 5) Connect the instrument air tube to nozzle N3. The other end shall be connected to the Analyser cabinet. Use the 6 mm nut set in SCS installation kit. Refer to Figure 18.

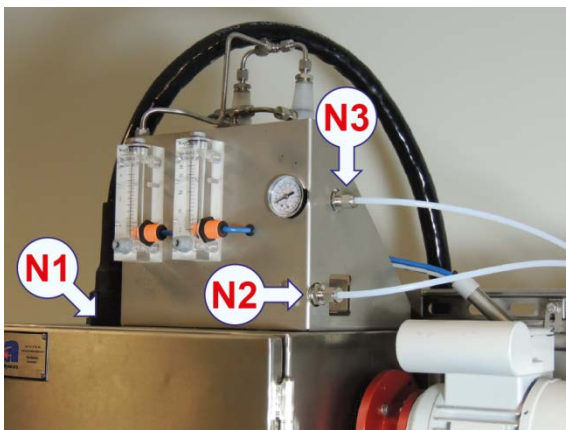

(IL-0061a-01)

Figure 18

Sample Conditioning System inlets/outlets

- N1: Wet sample inlet (from heated sample probe)
- N2: Dry sample outlet (to Analyser cabinet)
- N3: Instrument air inlet (from Analyser cabinet)

- 6) Connect the dry sample tube to nozzle N2. The other end shall be connected to the Analyser cabinet. Use the 6 mm nut set in SCS installation kit. Refer to Figure 18.



SCS installation kit includes:

- Black strip (1 pcs) for low profile connection
- Red strips (4 pcs) (high temperature) to attach heat tracer cable to tube.
- 10 mm nut set (1 pcs) for test socket (normally not used)
- 6 mm nut set (3 pcs) for sample in , sample out and air. Refer to N1, N2 and N3 in Figure 17.

Figure 19 SCS installation kit located in the SCS cabinet

Note The 10 mm nut included in the kit is normally not used.

The test socket is blocked. If it is not blocked, the samples will be taken from this point and not from the probe.



7.3.1 Heated sample line connection in SCS


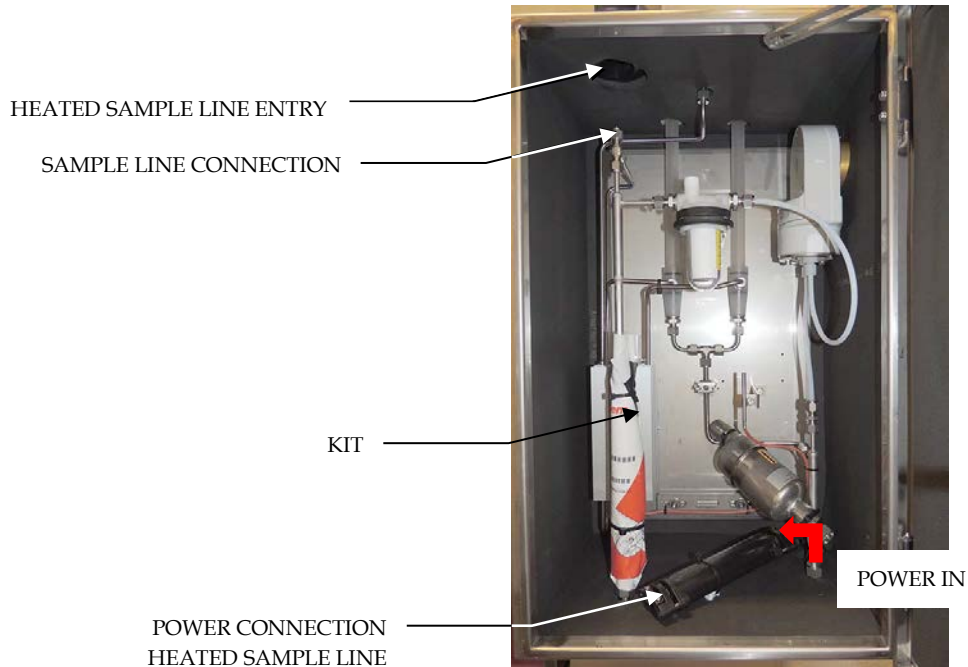


Figure 20 Sample Conditioning System inlets/outlets

- 1) Strip the heated sample line at an appropriate length (1000 mm) to be sure that the tracer cable can be connected to the power connection kit at the bottom of the cabinet.

Caution Take care not to damage the internal tracer cable and sample tube.

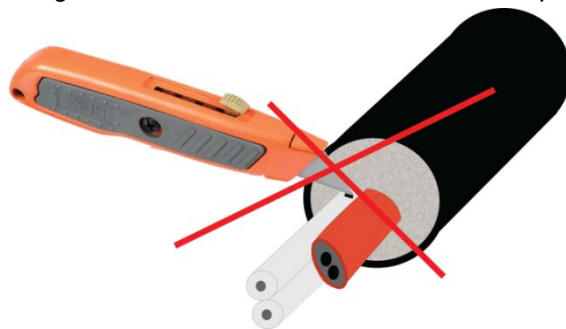


Caution If the tubes are damaged the whole heated sample line must be replaced.

The tracer cable will be connected to the power cable using the power connection kit supplied with the cabinet.

- 2) Place the threaded nut through nozzle N1 on top of the cabinet so that the flanged end is on the inside of the cabinet.
- 3) Adjust and cut the 6 mm sample tube at an appropriate point and connect the end to the sample inlet using the fitting supplied with the cabinet.
- 4) Cut the spare tube approx. 100 mm below the connection point of the sample tube.
- 5) Seal the spare tube with e.g. scotch tape to prevent dirt from entering.
- 6) Shrink the expanded nose (B in Figure 20) by applying heat with a heat gun. Move the heat gun back and forth to apply heat evenly. Stop heating when the nose has assumed the shape of the heated sample line.

Caution Hold the heated sample line approx. 5 minutes while the heat-shrinkable nose sets. Apply compressed air to speed up the process.

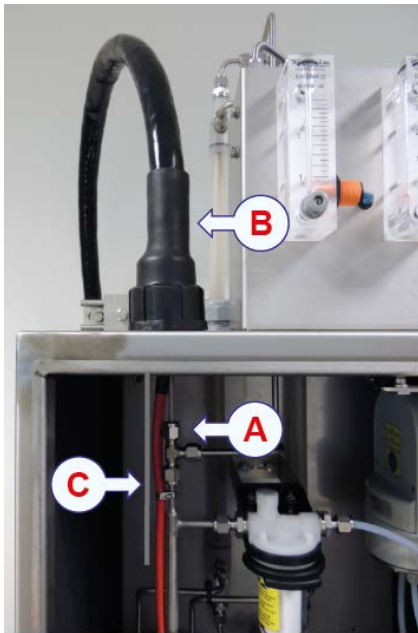

(IL-0061i-03)

Figure 21 Connection of sample tube (A), spare sample tube (C) and heat-shrunk nose (B)

- 7) Power connection in SCS (using Low Profile Connection)
The heated sample line that was connected to the probe in chapter 7.2 will now be connected to the SCS cabinet.



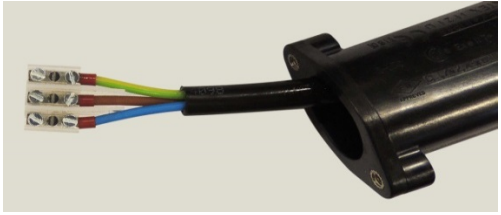






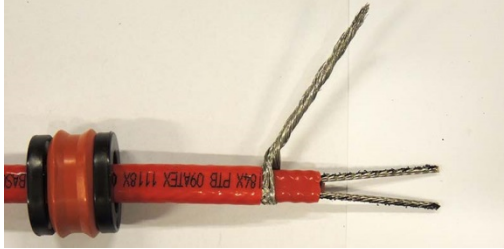
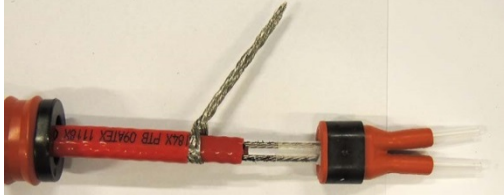
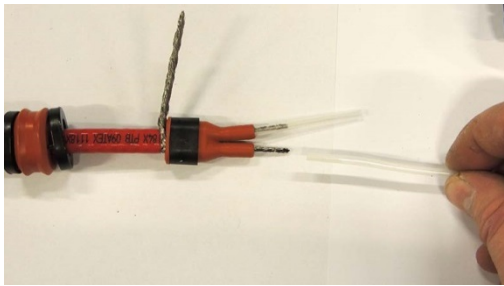
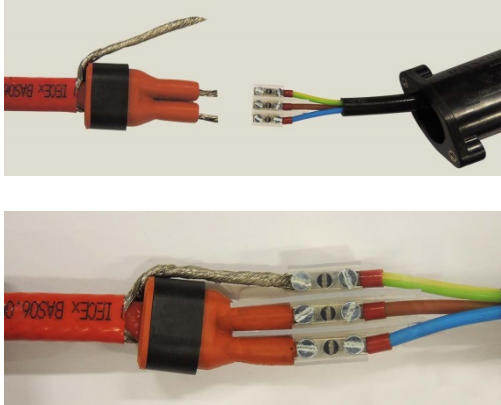
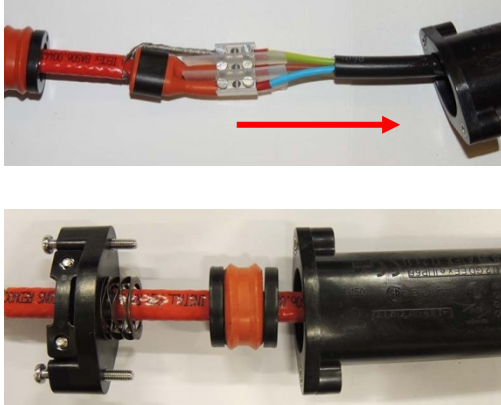



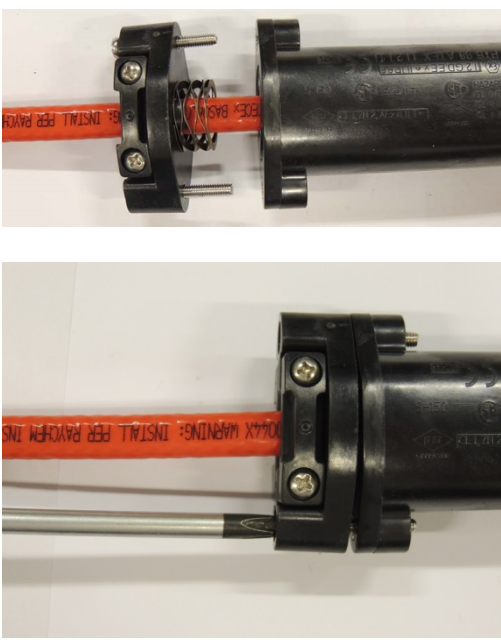
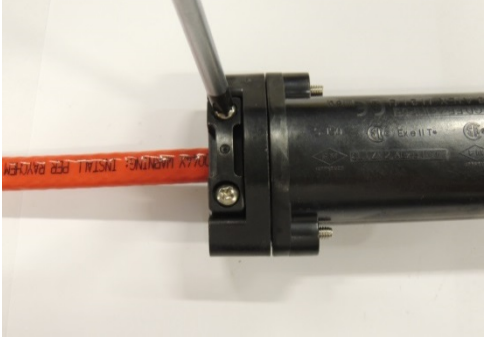


Figure 22 Power connection kit

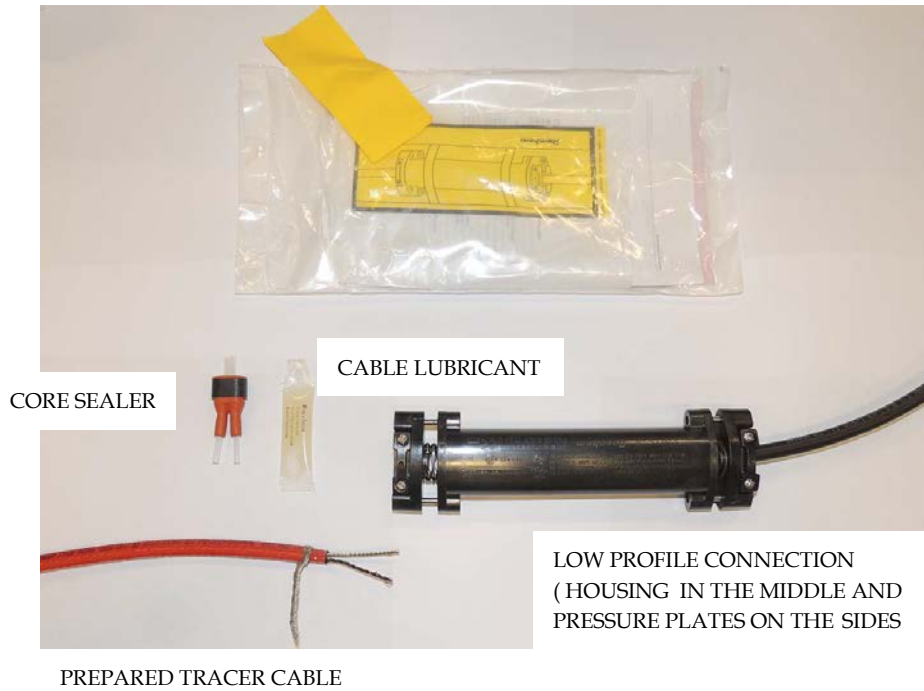
<p>a)</p>	<p>Loosen the cable clip holding the power cable in the rights side of the cabinet.</p>	
<p>b)</p>	<p>Check that the cable gland under the cabinet is loose and pull up some cable.</p>	
<p>c)</p>	<p>Check that the 2 screws on the right pressure plate are loose (for cable to run freely).</p>	

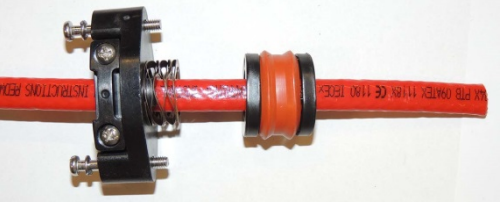d)	Disconnect pressure plate on the left side using 4 screws.	
e)	Push/pull the power cable through the housing.	
f)	Line up the tracer cable, pressure plate and the sealing grommet.	
g)	Apply lubricant inside the connection.	
h)	Push the tracer cable through the pressure plate and the sealing grommet.	
i)	Remove 70 mm of the outer jacket.	

j)	<p>Spread out and twist the screen (metal threads) to a single wire.</p>	
k)	<p>Remove 50 mm of the inner jacket.</p> <ul style="list-style-type: none"> • Cut the heating threads with a knife and remove, but be careful not to damage the electric wires. • Cut off the brown support under the heating threads using cutting pliers. Dispose. 	 
l)	<p>Thread the electric wires into the transparent guiding tubes of the core sealer. Push the core sealer all the way to the braid.</p>	
m)	<p>Remove the 2 guiding tubes.</p>	

<p>n)</p>	<p>Connect the braid to the ground cable on the terminal block. Connect the other two wires to the terminal block.</p>	
<p>o)</p>	<p>Pull the connection into the housing.</p>	
<p>p)</p>	<p>Apply cable lubricant from the kit to the sealing grommet.</p>	


<p>q)</p>	<p>Attach the pressure plate to the housing using 2 screws.</p>	
<p>r)</p>	<p>Secure the cable to the left pressure plate using 2 screws.</p>	
<p>s)</p>	<p>Secure the right pressure plate to the housing using 2 screws.</p>	
<p>t)</p>	<p>Secure the power cable to the right pressure plate using 2 screws.</p>	
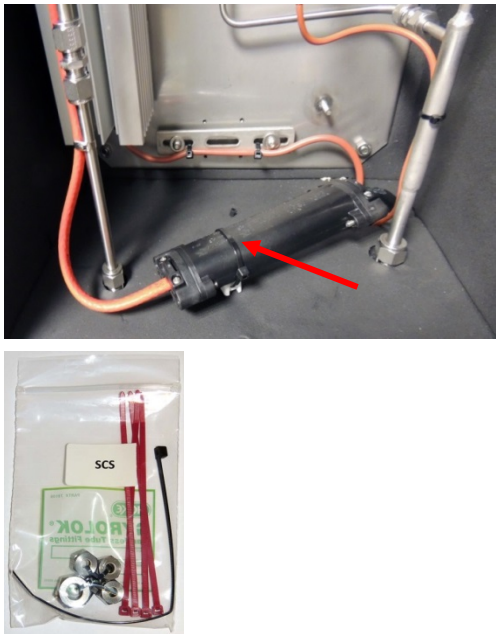
<p>u)</p>	<p>Re-strip the low profile connection kit to the bottom of the cabinet using the black plastic strips.</p> <hr/> <p><i>Note</i> Strips are included in a strip kit at the bottom of the SCS cabinet.</p>	
<p>v)</p>	<p>Pull gently excess cable through the cable gland in the bottom of the cabinet. Tighten the gland. Refer to step b).</p>	

- 8) Support the tracer cable vertically using the 4 pcs red plastic strips from the kit.



- 9) Cable entrances to the Sample Conditioning System are through M25 cable glands at the bottom of the cabinet's electrical junction box. Connect power supply at the dedicated terminals inside the junction box (to the motor protection switch).
- 10) Connect the Low Temperature Alarm signal at the dedicated terminals inside the junction box.
- 11) Connect the General SCS Alarm signal at the dedicated terminals inside the junction box. Note that this alarm is further relayed to the vessel control system from the Analyser System.

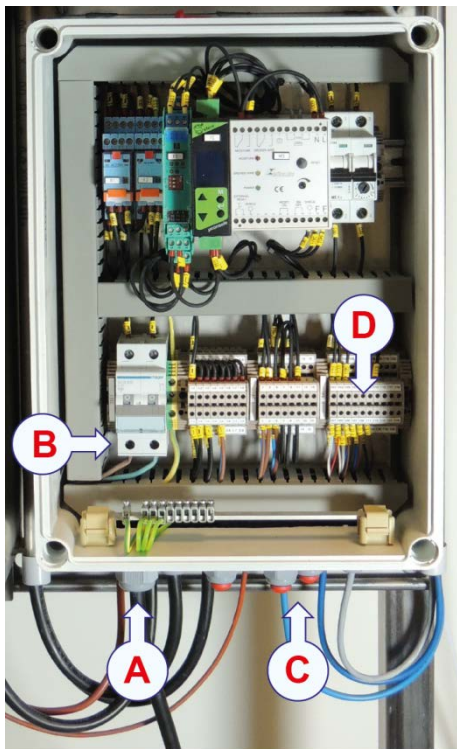

(IL-0061e-01)

Figure 23 Sample Conditioning System, electrical interfaces

- A: Cable gland for power
- B: Termination of power cable
- C: Cable glands for alarm signals
- D: Termination of alarm signal cables

12) Back purge:

- Standard:
Connect 24 VDC control signal from vessel. Refer to Figure 4.
- With optional Interface unit SC-IU:
Connect back purge signal between SCS and AC. Refer to Figure 5.

7.3.2 Calibration gas cylinder

Vimex part no: 501010

Unless the order states differently, the optional calibration gas cylinder has the following dimensions:

Volume: 10 litres

Connector: DIN 14 (unless others specified in order)

Depending on supplier the cylinders come in two different sizes:

Diameter Ø (mm)	Height (mm)
100	1500
200	900

Caution Make sure that gas cylinders are prevented from falling.

- 1) Connect the gas cylinder to N17. Refer to Figure 30 in chapter 7.4. Use the coil and regulator provided in the delivery.
- 2) Refer to user manual for procedure for parameter settings in chapter “Install or replace calibration gas cylinder”.

7.3.3 Back purge

Vimex part no: 501219

Drawing references:

→ [5102] – Sample Conditioning System, Back-flush Option, Junction Box

Back purge is standard equipment. Back purge mode is provided by an additional solenoid valve with tubing being preinstalled in the Sample Conditioning System. Back purging is then controlled by a dedicated 24 VDC customer signal. Refer to Figure 4 and Figure 5 in chapter 3.4.

- 1) Connect the 24 VDC back purge supply voltage and control signal cables to the Sample Conditioning System junction box as described by the termination diagram referred to above.

Note If optional ShipCEMS bus extension unit (interface unit, SC-IU, Vimex part no: 501221) is fitted, control signal comes from SC-IU (inside the analyser cabinet).

7.3.4 Adjust sensitivity of moisture sensor

Caution To prevent risk of damage to equipment and/or malfunction of system, it is absolutely crucial that the sensitivity of the moisture sensor is adjusted during start-up.

It is crucial to ensure proper functionality and to prevent possible damage to the ShipCEMS system that moisture sensor sensitivity is set to a proper level. This has to be done at actual installation during commissioning to ensure sensitivity matches dew point of available instrument air.

Prior to adjustment the system should be fully functional and operational. Make absolutely sure there are no traces of moisture anywhere in the system. Check tubing and filter housing thoroughly.

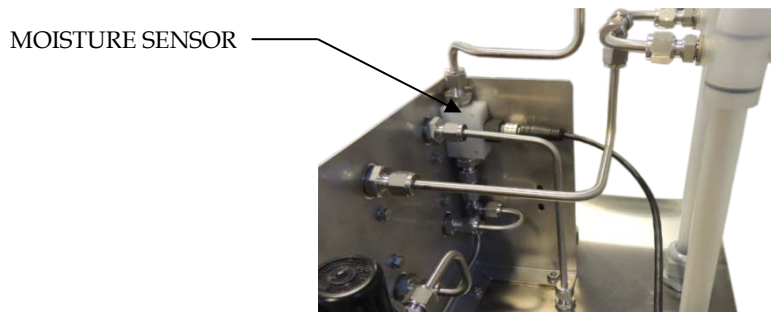


Figure 24 Moisture sensor

- 1) When scrubber is running and system is sampling, disconnect the heated sample line in Sample conditioning system (SCS) to make sure the sample is ambient air. Refer to Figure 24. Refer to Figure 1 for overview of installations.

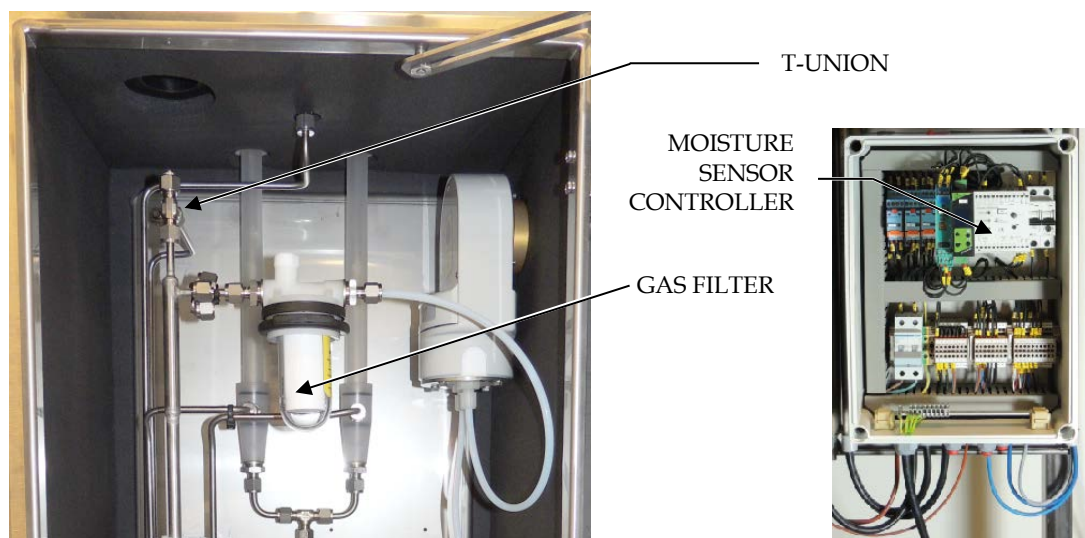


Figure 25 Disconnect heated sample line to make the system analyse ambient air

- 2) Locate moisture sensor controller. Refer to Figure 24.

- 3) Make sure bridge for "RESET ON" is removed. Refer to Figure 25.
- 4) Adjust potentiometer clockwise until moisture alarm is activated (red LED). Refer to Figure 25.
- 5) To adjust the moisture sensor against ambient air, reset the alarm and activate the set point by adjusting the potentiometer $\frac{1}{4}$ turn counter clockwise. Refer to Figure 25. (The red LED is turned off.)

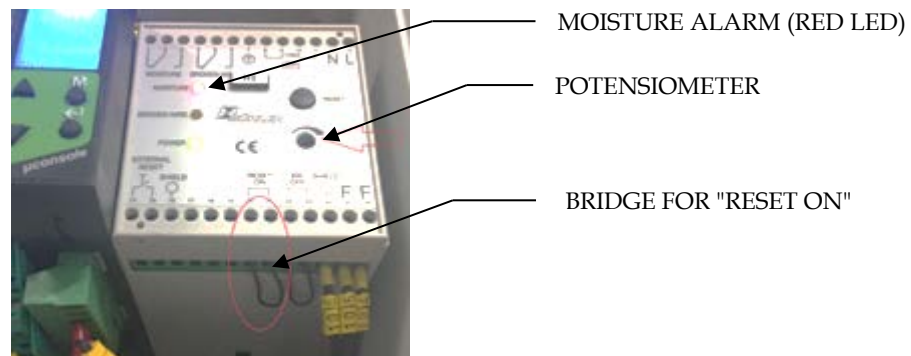


Figure 26 Moisture sensor controller

- 6) Re-connect heated sample line in SCS. Refer to Figure 24.
- 7) The sample conditioning cabinet is grounded by attachment on wall and junction box is grounded by the main power inlet. There is an extra earth stud (M8 x 30) under the cabinet if additional grounding of sample conditional cabinet is necessary.



7.4 Analyser cabinet

Warning *Outlet gas and calibration gas from Analyser cabinets (AC) need to be vented to free air.*

If AC is installed in a small room, the outlet gas level will increase unless it is vented. For personal safety, ensure the outlet gas has access to free air.

Drawing references:

- [1001] – *Analyser cabinet, External View*
- [1002] – *Analyser cabinet, Interior, Hook-up Locations*
- [1003] – *Analyser cabinet, Interior, Interface Unit – Optional (*)*
- [1005] – *Analyser cabinet, Hook-up / Wall Mounting, External View*
- [3001] – *Analyser cabinet, Stream Switching System*
- [3002] – *Analyser cabinet, PLC & Signal Conditioning*
- [3003] – *Analyser cabinet, PLC & Signal Conditioning, Interface Unit (*)*
- [5001] – *Power, Analyser cabinet – Interface, Emission Monitoring System*
- [5002] – *PLC Logo, Analyser System*
- [5201] – *Signal, Analyser cabinet – Interface, Emission Monitoring System*
- [5401] – *Cabinet Cooler System, 194 Watt Peltier Element, Analyser cabinet*

(*) Option

The Analyser cabinet is supplied as a complete unit, including a Unistrut profile mounting frame (41 x 21 mm) with anti-vibration cushions.

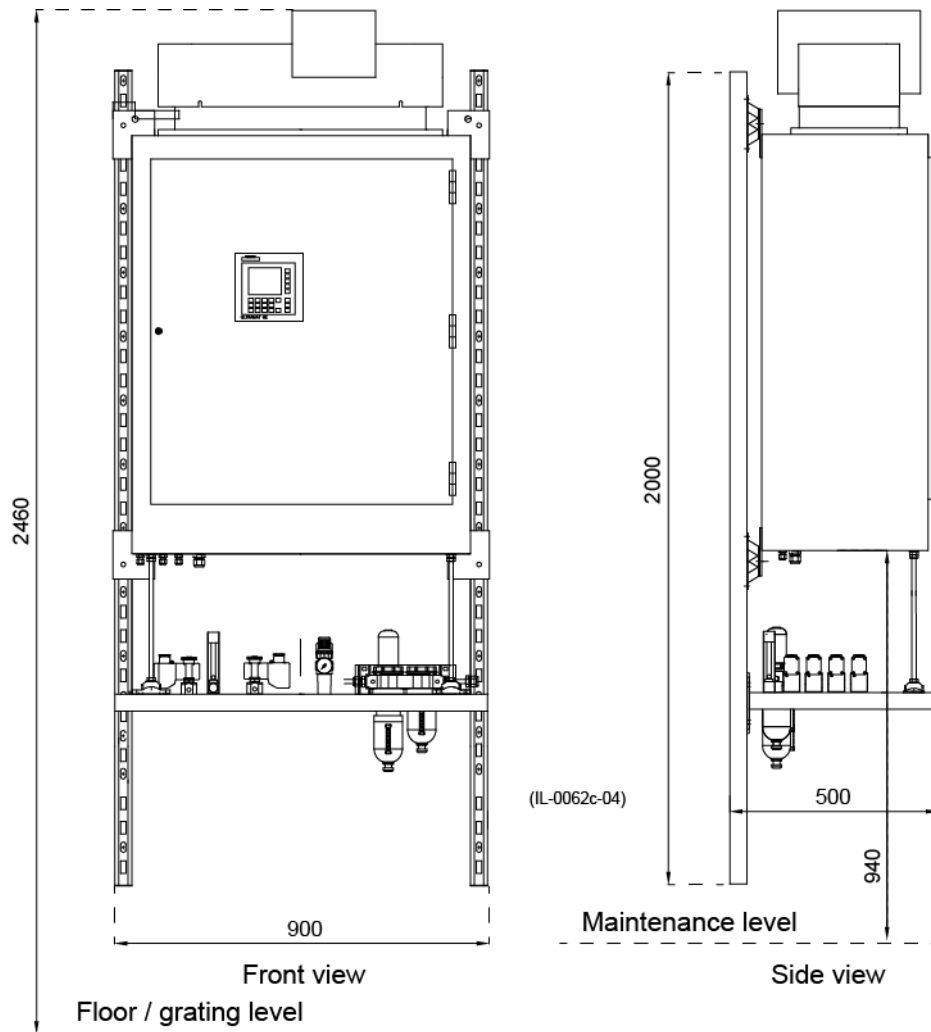


Figure 27 Analyser cabinet, outline dimensions

 <p>A clear plastic bag containing an AC installation kit for a 1-stream system. The bag has a white label that reads "AC" and "1 Stream". Inside the bag, there are several metal nuts and washers, a pair of black pliers, and a green package labeled "HOLOKOK" and "Fittings".</p>	<p>AC installation kit includes:</p> <ul style="list-style-type: none"> • Black strips (3 pcs) for LOGO display and thermostat connection • Nuts and washers (4 pcs each) for analyser module attachment (incl earth wire and cables for LOGO display and thermostat) • 10 mm nut set (1 pcs) for air inlet to AC cabinet (N12) • 6 mm nut set (5 pcs) for <ul style="list-style-type: none"> - cal gas (N17) - sample in (N6) - air out to SCS (N7) - bypass (sample in) (N8) - sample out from AC (N15)
 <p>Three clear plastic bags containing AC installation kits for 2, 3, and 4 stream systems. Each bag has a white label that reads "AC" and the corresponding stream count. The bags contain various metal nuts and washers, black strips, and green packages labeled "HOLOKOK".</p>	<p>For 2 stream system: Additional (2 pcs) 6 mm nut set</p> <p>For 3 stream system: Additional (4 pcs) 6 mm nut set</p> <p>For 4 stream system: Additional (6 pcs) 6 mm nut set</p>

Figure 28 AC installation kit located in the AC cabinet

- 1) Find a suitable and stable location for the cabinet. Mount the cabinet on ship's structural beams.
To ensure maintenance access, make sure that the cabinet is installed with adequate spacing in all directions.

Caution Do not install the analyser cabinet onto the funnel!

- 2) Prepare the installation framework by welding steel support for the cabinet on the ship's casing.

- 3) Lift the cabinet mounting frame onto the prepared framework using the lifting lugs.
- 4) Fasten the cabinet to its mounting frame with bolts and washers.
It is recommended to use minimum six M14 bolts with nuts, three on each of the vertical support frame bars. The upper bolt on each support bar shall be mounted above the lifting lugs. The arrangement should be fixed using flat washers and external tooth locks. Hand tighten.

The cabinet requires instrument air supply to operate. The air supply pressure shall be 6 to 8 barg (90 to 120 psig). Air supply is provided by the ship. Refer to technical specifications on instrument air in chapter 5.10.

- 5) Remove the cap on the bypass outlet. Make sure that the bypass outlet is not blocked or obstructed. Refer to Figure 28.

Caution *This is very important as this is also used as a bypass if pressure on analyser inlet is too high. This is a protective feature and might cause damage to system if blocked.*

- 6) Only for confined spaces or if connection to safe vent is desired:
Attach a 6 mm plastic tube (not provided) to N8 and connect the sample gas to safe vent. Use the 6 mm nut set is included in the AC installation kit. Make sure pressure is not built up in the tube.

Caution *Make sure that N8 and analyser outlet (N15) do not share the same tubing for ventilation to free air.*

Warning *Connect to safe vent if the surroundings do not have sufficient ventilation.*

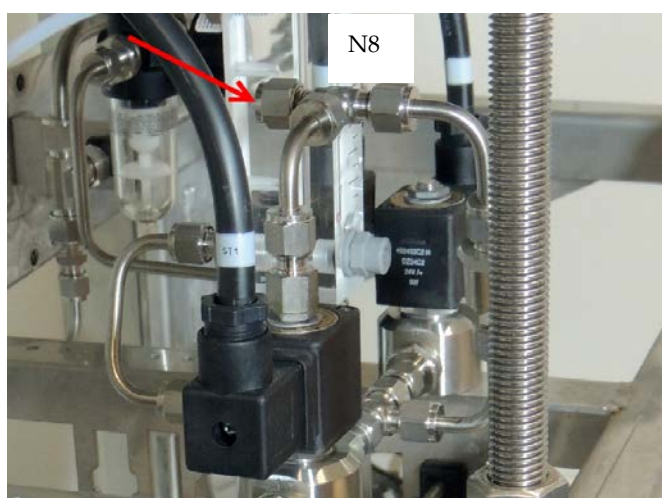


Figure 29 *Bypass flow must not be obstructed!*

- 7) Connect instrument air supplied by the ship to nozzle N12 using a 10 mm outer diameter tube. Use the 10 mm nut set included in the AC installation kit.

The instrument air supply must be oil-free and free of particulate matter.
The dew point must be less than -17°C (-1.4°F).

Note *If required, install an absorbing chemical unit to the instrument air header upstream the cabinet. This will prevent traces of oil entering the system.*

Note *If the air supply contains moisture install an air dryer unit to the instrument air header upstream the cabinet.*



Figure 30 *Instrument air dryer. External mount (left) and Internal mount (right).*

Note *Request installation manual for air dryer if this unit is delivered separately.*

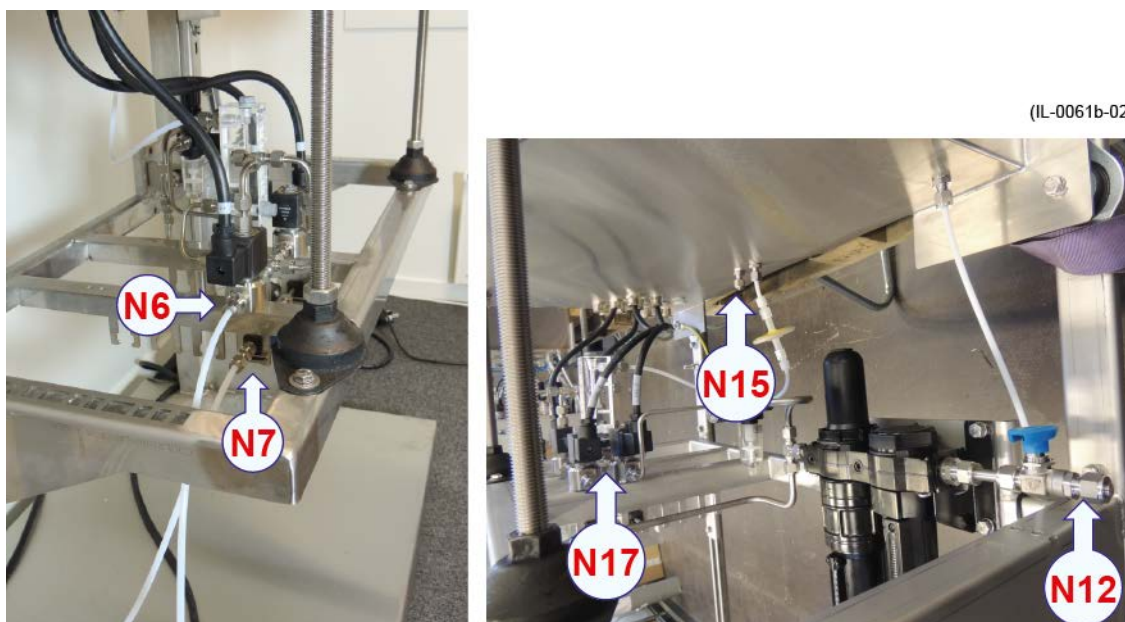


Figure 31 Analyser cabinet inlets/outlets

- N6: Dry sample inlet (from Sample Conditioning System)
- N7: Instrument air outlet (to Sample Conditioning System)
- N12: Instrument air inlet (ship supply)
- N15: Sample outlet (atmospheric vent)
- N17: Calibration gas inlet

- 8) Connect the instrument air tube to nozzle N7 using a 6 mm outer diameter tube. Use the 6 mm nut set is included in the AC installation kit. The other end shall be connected to the Sample Conditioning System, nozzle N3.
- 9) Connect the dry sample line to nozzle N6 using a 6 mm outer diameter PFA/PTFE tube. Use the 6 mm nut set is included in the AC installation kit. The other end shall be connected to the Sample Conditioning System, nozzle N2
- 10) Connect calibration span gas to nozzle N17 using a 6 mm outer diameter PFA/PTFE tube.
- 11) **Only for confined spaces or if connection to safe vent is desired:**
Attach a 6 mm plastic tube (not provided) to N8 and connect the sample gas to safe vent. Use the 6 mm nut set is included in the AC installation kit. Make sure pressure is not built up in the tube.

Warning *Connect to safe vent if the surroundings do not have sufficient ventilation.*

- 12) Cable entrances to the Analyser System are through M25 cable glands at the left hand bottom of the cabinet. Connect power supply at the dedicated terminals inside the cabinet box (to the circuit breaker).

- 13) Connect the General SCS Alarm signal from the Sample Conditioning System at the dedicated terminals inside the cabinet.
- 14) Connect digital I/O signals to the ship vessel control system at the dedicated terminals inside the cabinet.
- 15) Connect analogue signals (analyser readings) to the vessel control system at the dedicated terminals inside the cabinet as well as the back purge signal if SC-IU is installed.


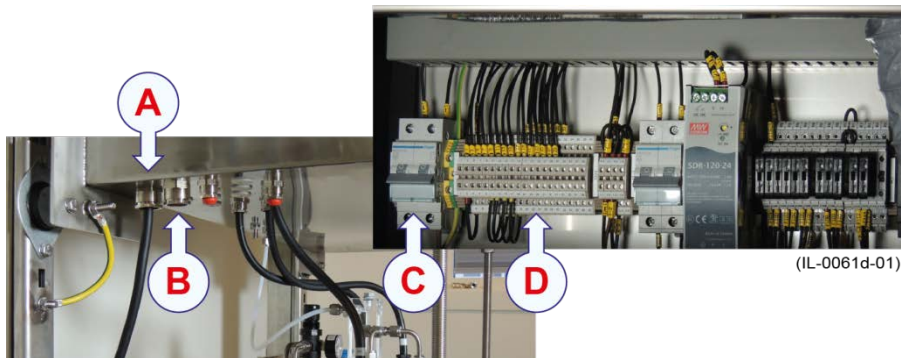


Figure 32 *Analyser cabinet, electrical interfaces*
A: Cable gland for power
B: Cable gland for I/O signals
C: Termination of power cable
D: Termination of I/O signal cables

- 16) As the cabinet is isolated from the supporting structure by rubber mounts, bond the cabinet's support frame to the ship's structure using an earthing cable. Figure 32 shows the preinstalled earthing cable between the cabinet and the frame.

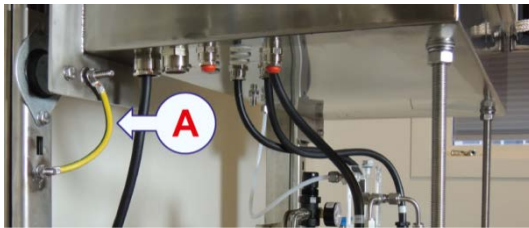

(IL-0061g-01)

Figure 33 Analyser cabinet, earth bonding

- 17) The Analyser Module is delivered in a cardboard box and shall be mounted in the Analyser cabinet at site. Lift the Analyser Module out of the cardboard box. It is recommended that one person shall support the unit physically whilst other person is connecting electrical cables and tubes.
- 18) Remove the two plugs above the power socket at the back of the analyser module.


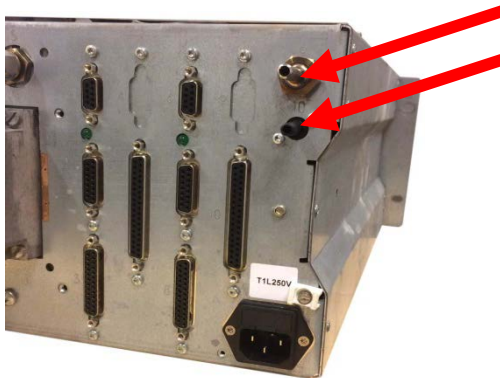


Figure 34 Plugs to be removed

- 19) Connect the atmospheric vent tube (A in Figure 34) and the sample inlet tube (B in Figure 34) to the Analyser Module.

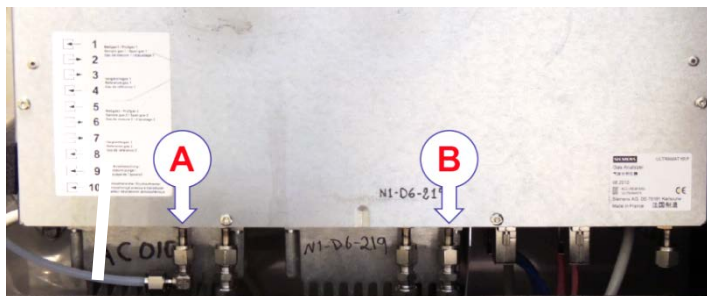

(IL-0061j-01)

Figure 35 Analyser Module assembly, lower connections
A: Atmospheric vent
B: Sample inlet

- 20) Connect power to the Analyser Module using the standard appliance plug.

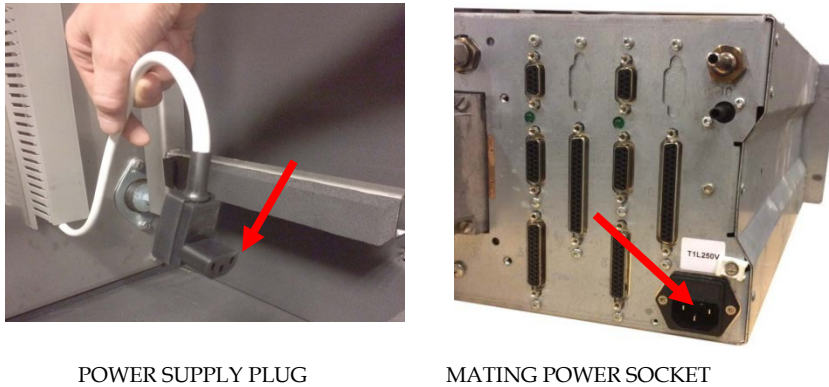


Figure 36 Connect analyser module to power

21) Ensure that the internal signal cables are properly fastened to the Analyser Module. Please note the colour marking of these cables. Refer to Figure 36.

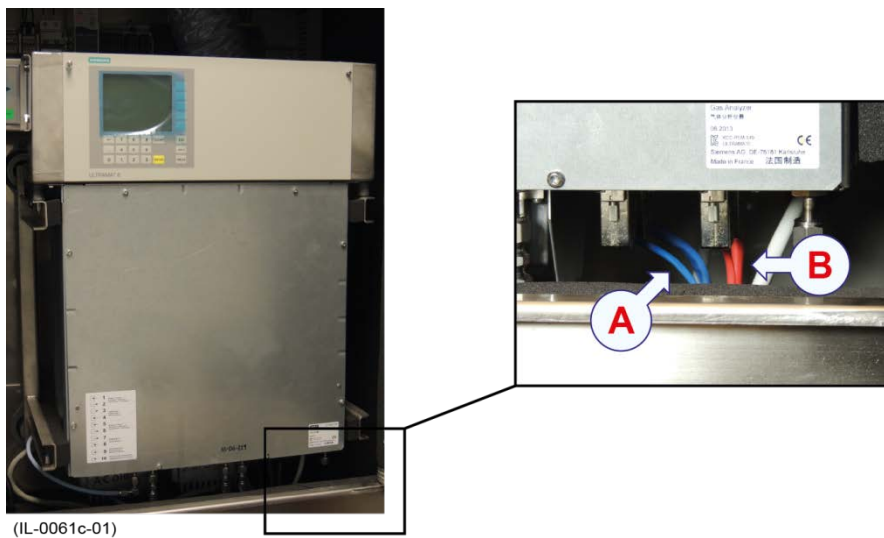


Figure 37 Colour marking of Analyser Module signal cables
A: Blue cables are used for channel #1 (SO₂)
B: Red cables are used for channel #2 (CO₂)

22) Lift the Analyser Module onto the dedicated anti-vibration frame and fasten it with the four accompanying screws.

- 23) Loosen the two front panel screws and tilt the hinged panel outward.



- 24) Connect the thermostat signal cable at the dedicated terminals inside the cabinet.

- 25) Leave the flexible duct strapped according to picture.



- 26) Fasten the hinged panel using the two front panel screws.

- 27) Enter correct date and time on the analyser display by selecting function code 58.

7.4.1 LOGO display

The LOGO display is temporarily mounted with the display towards the analyser to protect the display during transport on the hinged panel.

The LOGO TD will be replaced by LOGO TDE and some of the steps below have therefore pictures of both LOGO displays.



Note It is not possible to replace the LOGO TD to TDE display. To upgrade to TDE even the PLC must be replaced. Contact Vimex for more information.



LOGO TD



LOGO TDE

LOGO display installation:

- 1) Loosen the 2 screws on the hinged panel and gently open the panel.




- 2) Loosen the LOGO display from the hinged panel.




- 3) Turn the LOGO display and mount it so that the display is visible from the front. Use the same bolts and fasteners.




- 4) Open the cable tray and lift out the cables connected to the thermostat.

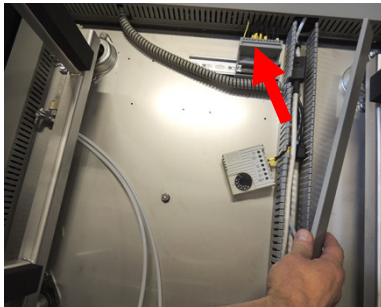


- 5) Locate the loose cables (LOGO display power cable, signal cable and earth cable, for TDE also Ethernet cable) that are not connected to the thermostat.

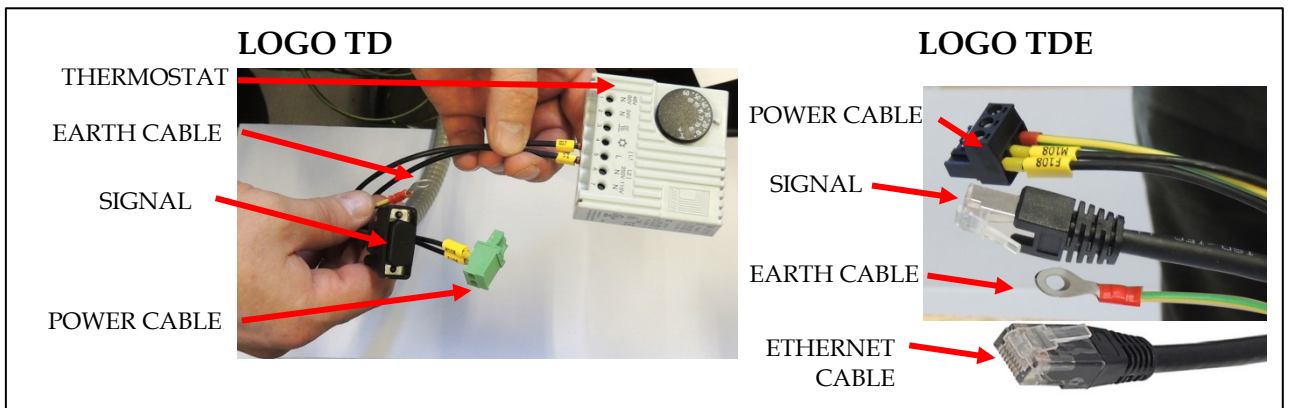


- 6) LOGO TD:
Connect the two cables (LOGO display power cable and signal cable) to the LOGO display. For LOGO TD use the screws to the signal cable.
LOGO TDE:
Connect the three cables (LOGO display power cable, signal cable and ethernet cable) to the LOGO display.

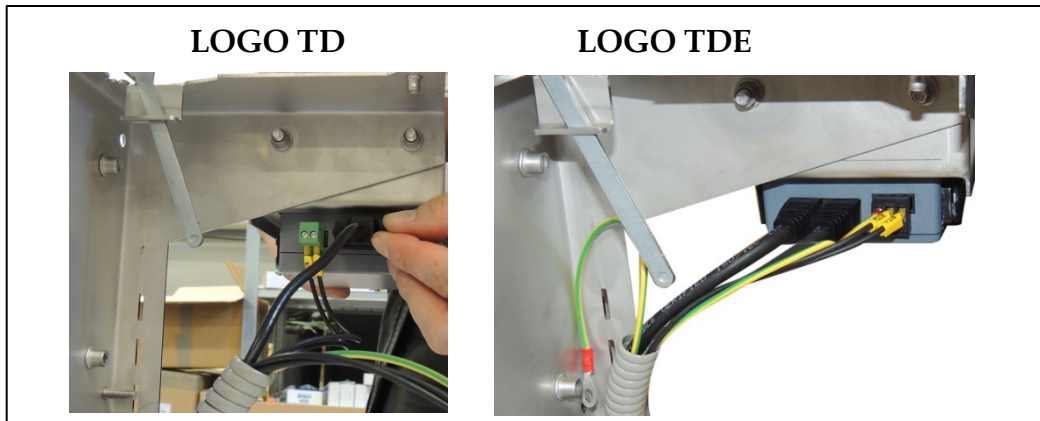


- 7) Connect the earth cable.

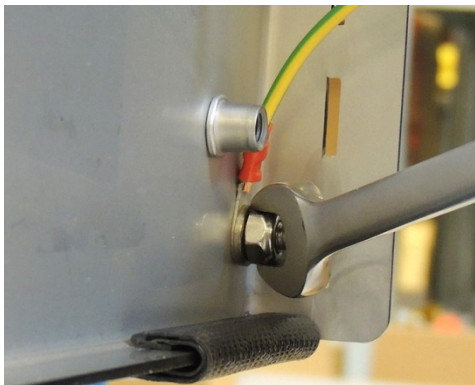


- 8) Clip the thermostat to the attachment (DIN bracket).

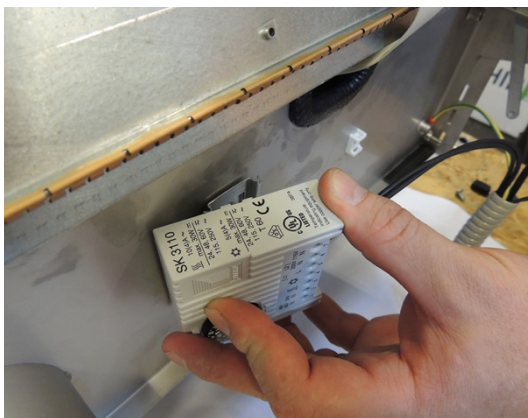

- 9) Strap the cables in three places. Straps are in plastic bag inside the AC.
Refer to Figure 27 in section 7.4.

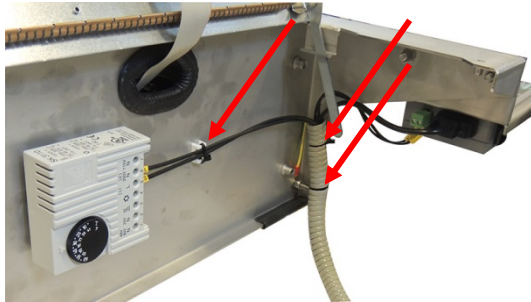

- 10) Close the hinged panel and fasten with the two screws.

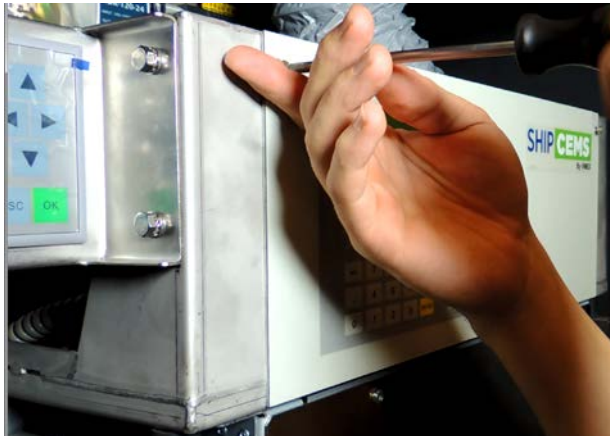

7.4.2 Remove plugs

Analyser cabinet:

At delivery both sample out and safety valve outlet are plugged to prevent ingress of dust. Refer to Figure 37.

Remove these two plugs, marked red in the figure below, before start-up. Make sure to vent to ventilated area.

Caution *Remove plugs to avoid buildup of pressure in the Analyser cabinet and thereby destroying the analyser.*

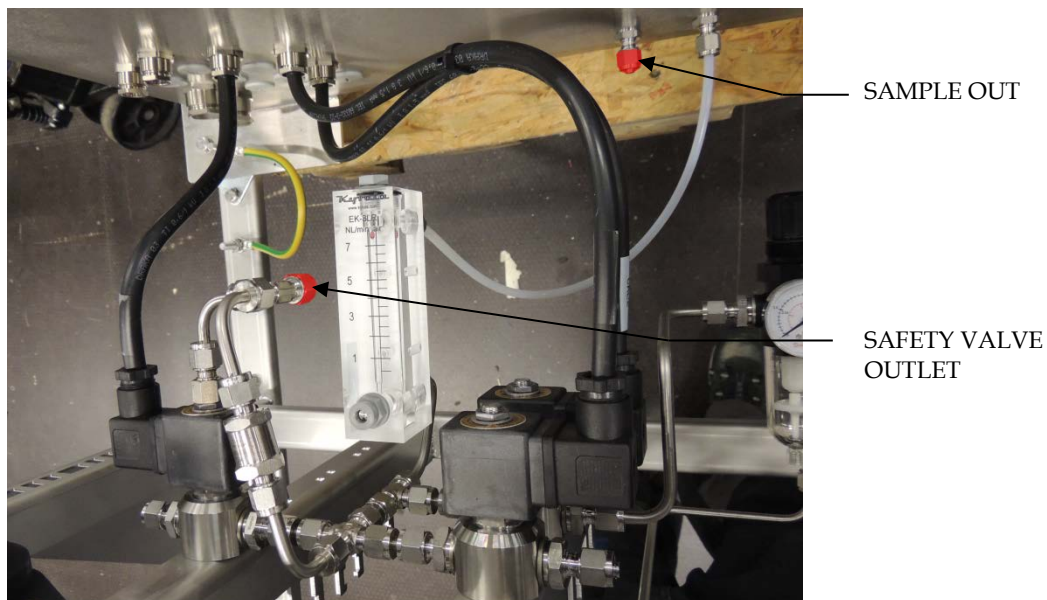


Figure 38 *Plugs under Analyser cabinet to be removed before start-up*

7.5 Emergency power switch (option)

Vimex part no: 501089

Drawing references:

- [1901] – *Emergency Stop, External/Interior View*
- [5601] – *Emergency Power Switch, SCS/Analyser cabinet*
- [5701] – *Emergency Power Switch, System Layout – Loop*

The emergency power switch assembly consists of a stainless steel terminal box with a preinstalled emergency switch and brass cable glands for power and stop signal.

Terminal box dimensions are 300 x 300 mm with depth 150 mm.

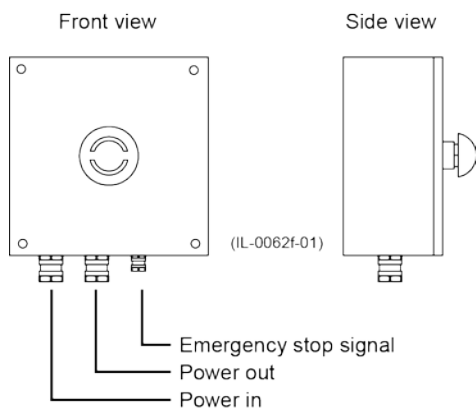


Figure 39 Emergency power switch assembly

- 1) Find a suitable location for the unit and fasten the box base with the four accompanying fixing screws.
- 2) Connect power and signal cables to the internal terminal block as described by the termination diagrams referred to above.
- 3) Fasten the box cover with gasket using the four accompanying cover screws.

8 Installation checklist

After the installation has been performed and before ShipCEMS is brought into operation for the first time, the checklist described in this chapter must be completed to confirm a correct installation.

It is recommended to set aside a period of time at the end of the installation phase specifically for these tests.

All results from the tests and any remarks to the product or the test results shall be recorded by hand in the accompanying tables.

The installation checklist shall be signed by the installation contractor when completed. This chapter shall then be printed or scanned and be returned to Vimex AS prior to commissioning.

Note *Return a scanned copy of the Installation checklist with results and if applicable remarks to Vimex AS after installation. Send to post@vimex.no and write the following in the subject field:*

ShipCEMS installation checklist, Project number: 15XXX

Guarantee does not apply unless the scanned copy of the Installation checklist is returned to Vimex AS.

	Action	Acceptance criteria	Result	Remark
1)	Check that all units have been delivered and installed.	Units shall be handled in accordance with GA and detail drawings.	<input type="checkbox"/> Accepted <input type="checkbox"/> Not accepted	
2)	Check that the units are not damaged.	No mechanical damages, scratches or dents shall be observed.	<input type="checkbox"/> Accepted <input type="checkbox"/> Not accepted	
3)	Check that each unit is accessible for operation and maintenance work.	Verify service access (cabinet doors can open completely, necessary access to internal modules, proper lightning etc.).	<input type="checkbox"/> Accepted <input type="checkbox"/> Not accepted	

	Action	Acceptance criteria	Result	Remark
4)	Check that all units are labelled.	Verify that labels are manufactured and mounted according to requirements.	<input type="checkbox"/> Accepted <input type="checkbox"/> Not accepted	
5)	Check the cabinet's vibration mounting.	Verify that the cabinets are fastened using proper mounting bolts and torque.	<input type="checkbox"/> Accepted <input type="checkbox"/> Not accepted	
6)	Check the sample probe.	<p>Verify that the sample probe mating flange is welded to the funnel as specified.</p> <p>Verify that the sample probe flange is fastened using proper mounting bolts and torque.</p> <p>Verify that the probe quill is correctly inserted.</p> <p>Verify that the ceramic filter is mounted and undamaged.</p>	<input type="checkbox"/> Accepted <input type="checkbox"/> Not accepted	
7)	Check the external tubing.	<p>Verify that sample lines, calibration gas and instrument air is connected as specified.</p> <p>Make sure that the tubing is supported and protected from breakage.</p>	<input type="checkbox"/> Accepted <input type="checkbox"/> Not accepted	
8)	Check instrument air.	Verify that instrument air is dry and oil free acc. to ISO 8573-1:2010 class 1.2.1.	<input type="checkbox"/> Accepted <input type="checkbox"/> Not accepted	

	Action	Acceptance criteria	Result	Remark
9)	Check vents. <hr/> <i>Warning Make sure room is vented!</i> <hr/>	Verify that the atmospheric vent is not restricted.	<input type="checkbox"/> Accepted <input type="checkbox"/> Not accepted	
10)	Check sample out and safety valve outlet under Analyser cabinet are vented. <hr/> <i>Warning Make sure room is vented!</i> <hr/>	Verify that plugs are removed.	<input type="checkbox"/> Accepted <input type="checkbox"/> Not accepted	
11)	Check the heated sample line.	Verify that the heated sample line is sufficiently supported and that the minimum bending radius is adhered to.	<input type="checkbox"/> Accepted <input type="checkbox"/> Not accepted	
12)	Check the heated sample line.	Verify that there are no water traps.	<input type="checkbox"/> Accepted <input type="checkbox"/> Not accepted	
13)	Check for loose fittings.	Check tightness by hand.	<input type="checkbox"/> Accepted <input type="checkbox"/> Not accepted	
14)	Check the electrical cabling.	Verify that all power and signal cables are routed and terminated according to termination and wiring diagrams.	<input type="checkbox"/> Accepted <input type="checkbox"/> Not accepted	
15)	Check for loose wires.	Verify that all connections in junction boxes and internal terminal blocks are tight and secure.	<input type="checkbox"/> Accepted <input type="checkbox"/> Not accepted	

	Action	Acceptance criteria	Result	Remark
16)	Check electrical fuses.	Verify that all equipment is connected to its correct fuse. Verify correct current rating for all fuses.	<input type="checkbox"/> Accepted <input type="checkbox"/> Not accepted	
17)	Check the gas filter.	Verify adequate filter quality by inspecting the filter housing and filter element. Refer to Figure 24 in section 7.3.4.	<input type="checkbox"/> Accepted <input type="checkbox"/> Not accepted	
18)	Check the gas pump in the SCS cabinet.	Inspect the gas pump for any damage or for obstacles.	<input type="checkbox"/> Accepted <input type="checkbox"/> Not accepted	

To be filled in by installation contractor:

Installation contractor	
Ship name / hull no.	
Ship owner	
Checks performed by (date/sign)	
Checks verified by (date/sign)	

9 Drawing references

The ShipCEMS drawings given below are enclosed as separate files.

Note that [nnnn] is used as number identification for standard product drawings, but this is subject to change when specified by contract.

DWG	Description	ShipCEMS standard (230V)	Option	120V
Mechanical drawings:				
1001	General Arrangement Drawing, Emission Monitoring Cabinet, CO2 & SO2, External View	X		X
1002	General Arrangement Drawing, Analyser cabinet, Interior	X		X
1003	General Arrangement Drawing, Analyser cabinet, Interior, Interface Unit	X	X	X
1005	General Arrangement Drawing, Emission Monitoring Cabinet, Hook-up / Wall Mounting, External View	X		X
1202	General Arrangement Drawing, Heated Sample Probe, Flange DN65 - PN6, 230 VAC Electric Heated	X		X
1801	General Arrangement Drawing, Sample Conditioning Cabinet, Emission Monitoring, SO2 - CO2 In Flue Gas	X		X
1802	General Arrangement Drawing, Sample Conditioning Cabinet, Interior	X		X
1804	General Arrangement Drawing, Sample Conditioning Cabinet, Hook-up / Wall Mounting, External View	X		X
1805	General Arrangement Drawing, Sample	X		X

DWG	Description	ShipCEMS standard (230V)	Option	120V
	Conditioning Cabinet, Junction Box Layout			
System drawings:				
3001	System Diagram, Analyser cabinet, Stream Switching System, Emission Monitoring System	X		X
3002	System Diagram, Analyser cabinet, PLC & Signal Conditioning, Emission Monitoring System	X		X
3003	Analyser cabinet, PLC & Signal Conditioning, Interface Unit	X	X	X
3801	System Diagram, Sample Conditioning System, Emission Monitoring, SO ₂ - CO ₂ Analysis In Flue Gas	X		X
Electrical drawings:				
5001	Termination Diagram - Power, Analyser cabinet - Interface, Emission Monitoring System, SO ₂ - CO ₂ Analysis In Flue Gas	X		X
5002	Termination Diagram, PLC Logo, Analyser System	X		X
5101	Termination Diagram, Sample Conditioning System, Heater & Flow Control Logic, Junction Box	X		X
5102	Termination Diagram, Sample Conditioning System, Backflush Option, Junction Box	X	X	X
5201	Termination Diagram - Signal, Analyser cabinet - Interface, Emission Monitoring System, SO ₂ - CO ₂ Analysis In Flue Gas	X		X


DWG	Description	ShipCEMS standard (230V)	Option	120V
5202	Termination Diagram - Signal, Analyser cabinet - Interface, Emission Monitoring System, Interface Unit, Option	X	X	X
5301	Termination Diagram, Heated Sample Probe, Model 222.15 / 222.17, Plug Connections	X		X
5401	Termination Diagram, Cabinet Cooler System, 194 Watt Peltier Element, Analyser cabinet	X		X
5802	Termination drawing, ShipCEMS Interface Unit	X	X	X
9802	Field Bus Specification, ADDON U6 for CO	X	X	X
Block diagrams:				
6001	System Block Diagram, Pipe and Gas, Distribution overview	X		X
6101	Electric Block Diagram, Signal and power, Distribution overview, Interface unit - Optional	X	X	X

10 Installation overview


The overviews on the two following pages are extracts from the drawings below. The extracts should be considered as generic examples.

- *[P300-6001 rev.01] - System Block Diagram Pipe and Gas Distribution Overview*
- *[P300-6101 rev.03] - Electrical Block Diagram Signal and Power Distribution Overview Interface unit – Optional*

Note *Always follow the latest revision of the drawing!*

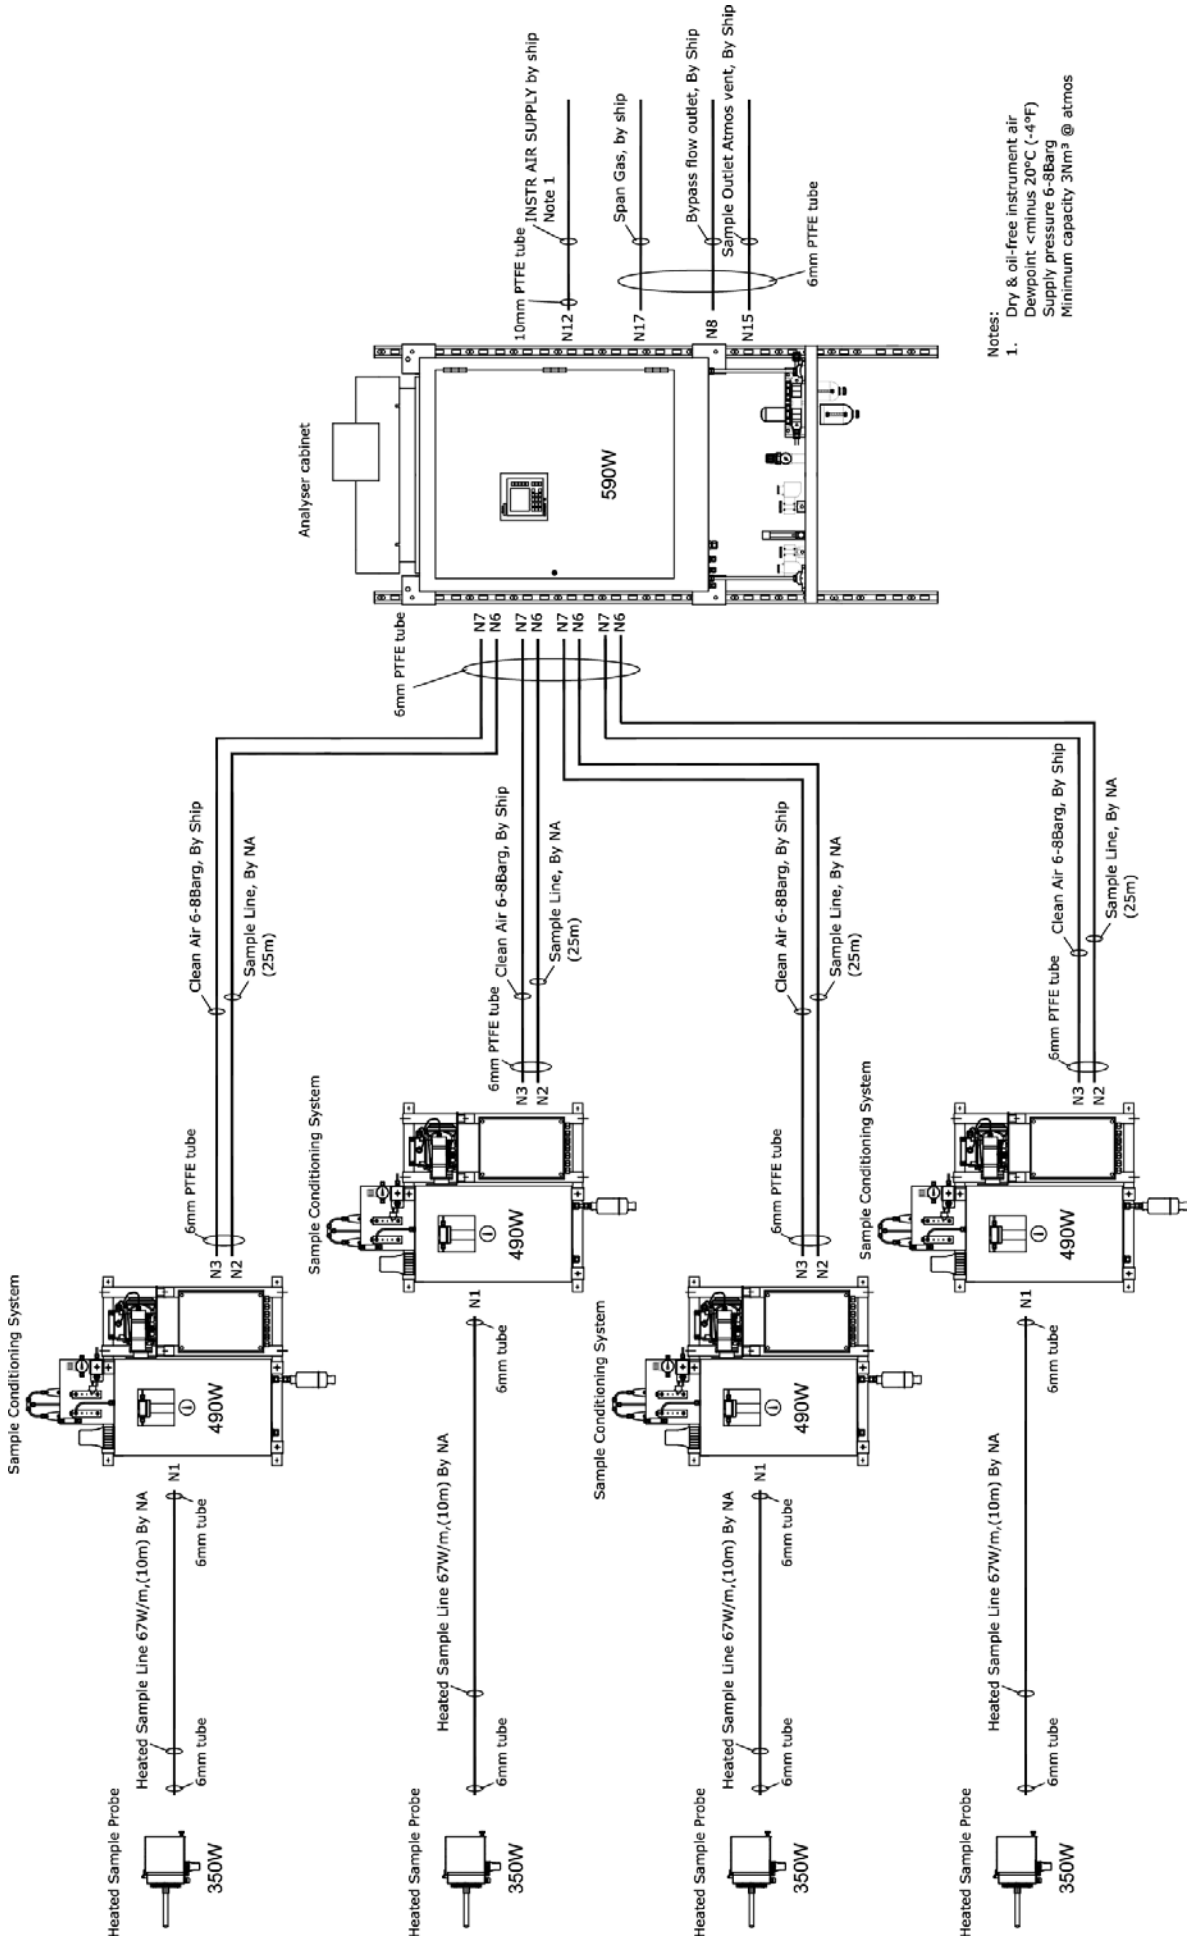

- Notes:
1. Dry & oil-free instrument air
 Dewpoint < minus 20°C (-4°F)
 Supply pressure 6-8Barg
 Minimum capacity 3Nm³ @ atmos

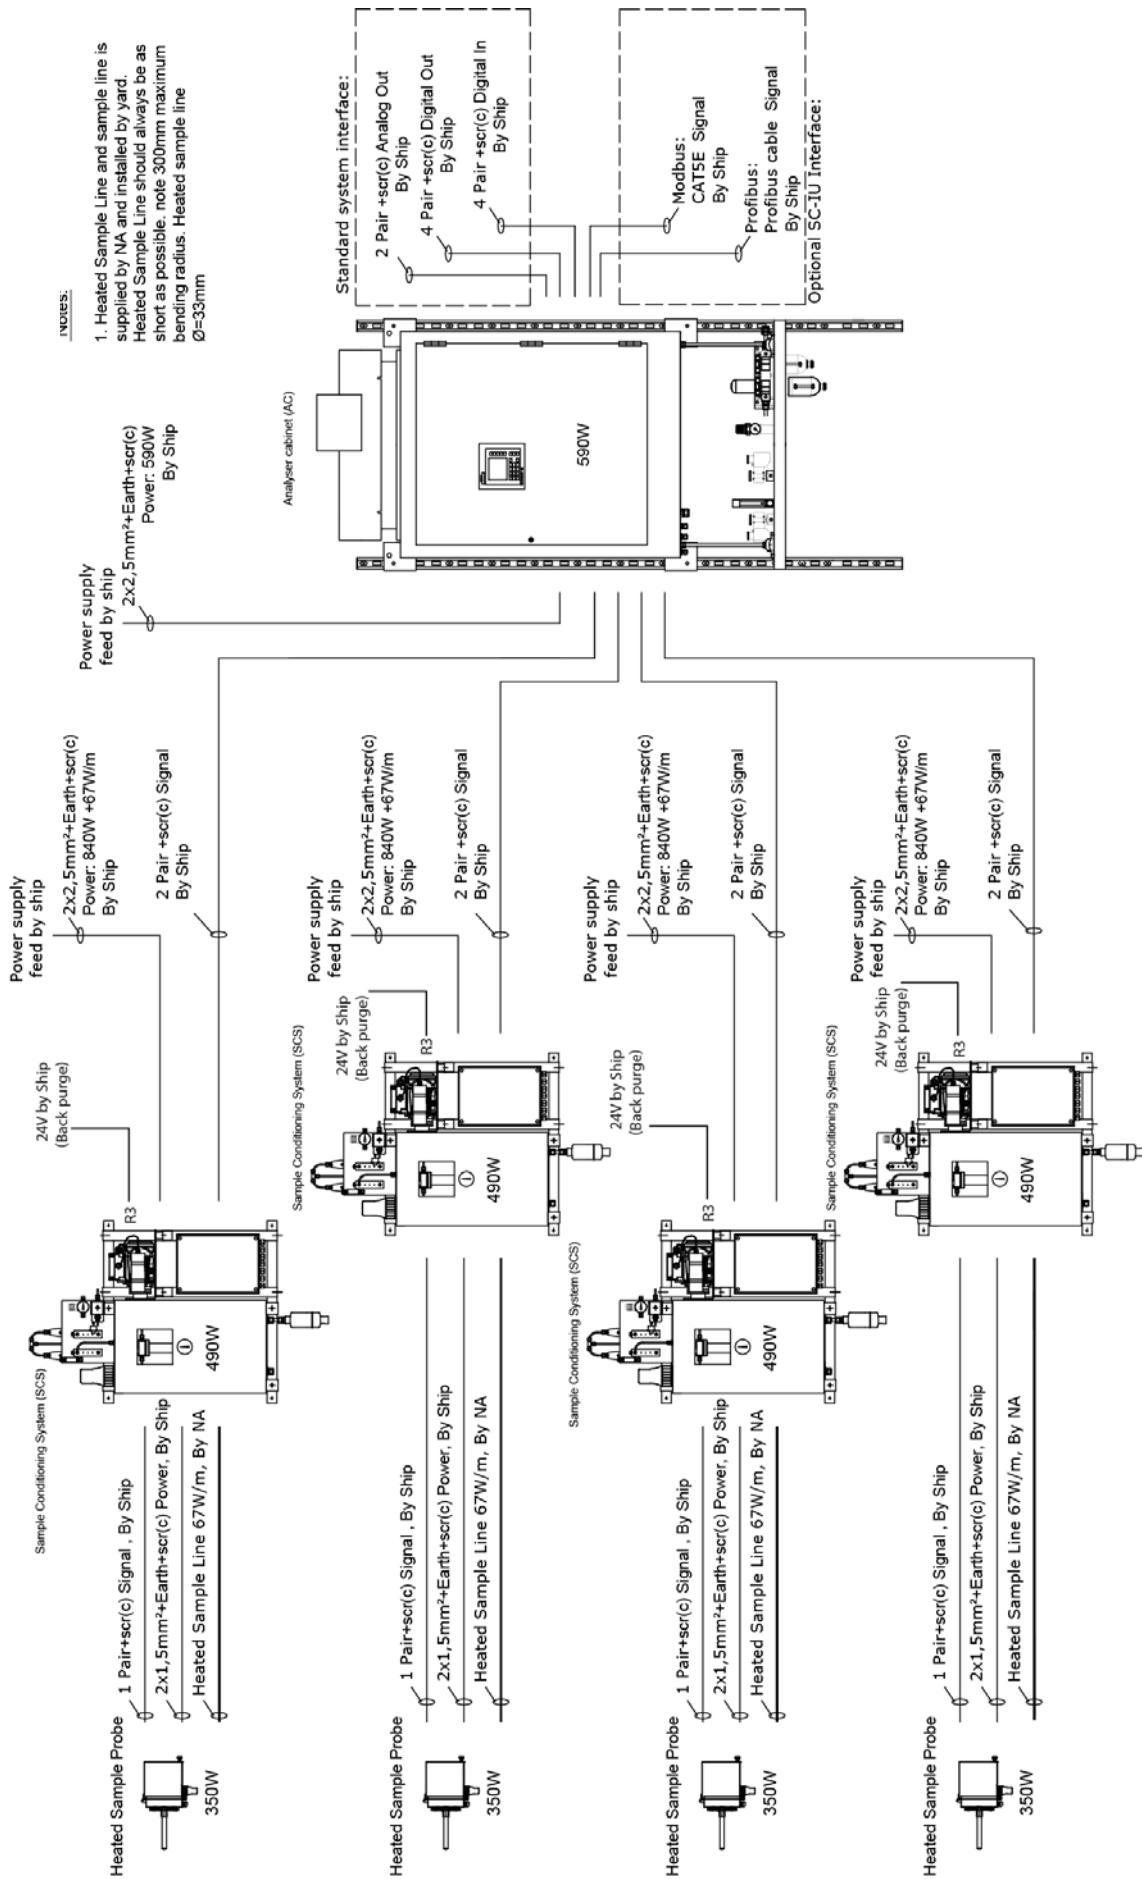

© Vimex AS

